

## TABLE OF CONTENTS

<b>Manual Revision History .....</b>	<b>3</b>
<b>Important Safety Notice .....</b>	<b>4</b>
<b>General Power Tool Safety Warnings .....</b>	<b>4</b>
<b>1.0 General Information .....</b>	<b>6</b>
<b>1.1 System Components .....</b>	<b>6</b>
<b>1.2 Specifications .....</b>	<b>6</b>
1.2.1 Torque Ranges .....	6
1.2.2 Electrical Specifications.....	7
1.2.3 Environmental Specifications.....	7
1.2.4 Cycle of Operation .....	7
<b>2.0 Power Requirements.....</b>	<b>7</b>
<b>2.1 AC Mains Power .....</b>	<b>7</b>
<b>2.2 Earth Grounding Safety .....</b>	<b>8</b>
<b>2.3 Ground Fault Circuit Interrupt (GFCI).....</b>	<b>8</b>
<b>2.4 Extension Cords .....</b>	<b>8</b>
<b>2.5 Power Cycling .....</b>	<b>8</b>
<b>3.0 Tool System Overview.....</b>	<b>8</b>
<b>3.1 Tool Handle Description .....</b>	<b>8</b>
<b>3.2 Controller Description .....</b>	<b>9</b>
<b>3.3 Touch Display Interface.....</b>	<b>9</b>
3.3.1 Main Screen .....	10
3.3.2 Menus.....	10
3.3.3 The "SS" Icon.....	10
<b>3.4 User Access Levels.....</b>	<b>11</b>
3.4.1 Unlocking Access Levels .....	12
3.4.2 Returning to the Locked Level.....	12
<b>3.5 Connecting the Tool Components.....</b>	<b>13</b>
<b>3.6 Start-Up With No Handle.....</b>	<b>13</b>
<b>4.0 Common Functions .....</b>	<b>14</b>
<b>4.1 Select a Preset .....</b>	<b>14</b>
<b>4.2 Change the Set Torque .....</b>	<b>15</b>
<b>4.3 Change the Set Angle .....</b>	<b>15</b>
<b>4.4 Modify Presets .....</b>	<b>16</b>
<b>4.5 Setup a DataLog File.....</b>	<b>16</b>
<b>4.6 View a DataLog File .....</b>	<b>18</b>
<b>4.7 Information Functions.....</b>	<b>19</b>
4.7.1 View Tool Information .....	19
4.7.2 View Tool Statistics .....	20
4.7.3 View Diagnostics.....	22
<b>5.0 Tool Functions.....</b>	<b>22</b>
<b>5.1 Connecting to a Smart Socket .....</b>	<b>22</b>
<b>5.2 Change the Torque Units .....</b>	<b>23</b>
<b>5.3 Angle Mode .....</b>	<b>23</b>
<b>5.4 Operator Password .....</b>	<b>24</b>
<b>5.5 Torque Graphing.....</b>	<b>25</b>
<b>5.6 Hide Result .....</b>	<b>25</b>
<b>5.7 Hide Joint.....</b>	<b>25</b>



---

<b>5.8 Auto Lock</b> .....	<b>26</b>
<b>5.9 Reverse Confirmation</b> .....	<b>26</b>
<b>5.10 Trigger Stop</b> .....	<b>27</b>
<b>5.11 Sensor Mode</b> .....	<b>27</b>
<b>5.12 Low Pre-Torque</b> .....	<b>27</b>
<b>5.13 Torque Check</b> .....	<b>29</b>
<b>5.14 Change Tool Back-Off Angle</b> .....	<b>30</b>
<b>5.15 Point Calibration</b> .....	<b>31</b>
<b>5.16 Blue Calibration</b> .....	<b>33</b>
<b>5.17 Torque Limits</b> .....	<b>34</b>
<b>5.18 Angle Limits</b> .....	<b>35</b>
<b>5.19 Maintenance Cycle Control</b> .....	<b>36</b>
<b>5.20 Clear Maintenance Statistics</b> .....	<b>38</b>
<b>5.21 Calibration Adjust</b> .....	<b>38</b>
<b>5.22 Set Clock</b> .....	<b>40</b>
<b>5.23 Network</b> .....	<b>40</b>
<b>5.24 Gateway</b> .....	<b>41</b>
<b>5.25 Factory Settings</b> .....	<b>41</b>
<b>6.0 Calibration</b> .....	<b>41</b>
<b>7.0 General Operating Instructions</b> .....	<b>43</b>
<b>7.1 Reaction Arm</b> .....	<b>43</b>
7.1.1 Installing the Reaction Arm .....	44
7.1.2 Reaction Arm Height .....	44
7.1.3 Reaction Arm Foot .....	45
7.1.4 Reaction Points .....	45
<b>7.2 Torque Only Operation</b> .....	<b>46</b>
<b>7.3 Angle Only Operation</b> .....	<b>47</b>
<b>7.4 Torque and Angle Operation</b> .....	<b>48</b>
<b>7.5 Reviewing the Last Result</b> .....	<b>49</b>
<b>8.0 DataLog PC Operations</b> .....	<b>50</b>
<b>8.1 Software Installation and PC Requirements</b> .....	<b>50</b>
<b>8.2 Connecting E-RAD and PC</b> .....	<b>50</b>
<b>8.3 Setting the Clock</b> .....	<b>51</b>
<b>8.4 Downloading all DataLogs</b> .....	<b>52</b>
<b>8.5 Deleting DataLogs from the E-RAD BLU</b> .....	<b>52</b>
<b>8.6 Exporting Data</b> .....	<b>53</b>
<b>8.7 Edit Applications</b> .....	<b>54</b>
<b>8.8 Manage Operator Passwords</b> .....	<b>57</b>
<b>9.0 Troubleshooting</b> .....	<b>58</b>
<b>9.1 Errors and Solutions</b> .....	<b>58</b>
<b>9.2 Connecting to a Smart Socket: Troubleshooting</b> .....	<b>60</b>
<b>10.0 Contact Us</b> .....	<b>61</b>

## MANUAL REVISION HISTORY

### **V2014.06.17:**

- Initial Release for Firmware ERAD-27.0109

### **V2017.01.26:**

- Release for Firmware ERAD-27.0300
- Updated Manual Layout
- Updated Important Safety Notice
- Updated Pictures

### **V2017.07.19:**

- Release for Firmware ERAD-27.0300.0232 and newer
- Moved 7.6 – Start-Up With No Handle to 3.6
- Changed order of various sections in 5.0
- Changed order of features in 3.4 – User Access Levels
- Updated screenshots and images

*E-RAD BLU Tool System – Original Instructions*

## IMPORTANT SAFETY NOTICE



### **WARNING!**

READ ALL SAFETY WARNINGS AND ALL INSTRUCTIONS. FAILURE TO FOLLOW THE WARNINGS AND INSTRUCTIONS MAY RESULT IN ELECTRIC SHOCK, FIRE, AND/OR SERIOUS INJURY.

NEW WORLD TECHNOLOGIES INCORPORATED IS NOT RESPONSIBLE FOR ANY SUCH INJURY.

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

## General Power Tool Safety Warnings

The term "power tool" in the warnings refers to your mains-operated (corded) power tool.

### 1. Work Area Safety

- a. **Keep work area clean and well lit.** Cluttered and dark areas invite accidents.
- b. **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.** Power tools create sparks which may ignite the dust or fumes.
- c. **Keep children and bystanders away while operating a power tool.** Distractions can cause you to lose control.

### 2. Electrical Safety

- a. **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** Unmodified plugs and matching outlets will reduce the risk of electric shock.
- b. **Avoid body contact with earthed (grounded) surfaces such as pipes, radiators, ranges, or refrigerators.** There is an increased risk of electric shock if your body is earthed (grounded).
- c. **Do not expose power tools to rain or wet conditions.** Water entering a power tool will increase the risk of electric shock.
- d. **Do not abuse the cord. Never use the cord to carry, pull, or unplug the power tool. Keep cord away from heat, oil, sharp edges, and moving parts.** Damaged or entangled cords increase the risk of electric shock.
- e. **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f. **If operating a power tool in a damp location is unavoidable, use a Ground Fault Circuit Interrupter (GFCI) protected supply.** Use of a GFCI reduces the risk of electric shock.

### 3. Personal Safety

- a. **Stay alert, watch what you are doing, and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol, or medication.** A moment of inattention while operating power tools may result in serious personal injury.
- b. **Use personal protective equipment and always wear eye protection.** Protective equipment such as a dust mask, non-skid safety shoes, hard hat, and hearing protection used in appropriate conditions will reduce personal injuries.
- c. **Prevent unintentional starting.** Ensure the switch is in the off position before connecting to a power source and/or battery pack, picking up, or carrying the tool. Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.
- d. **Keep all body parts clear of moving parts and the reaction contact point.**
- e. **Remove any adjusting key or wrench before turning the power tool on.** A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- f. **Do not overreach. Keep proper footing and balance at all times.** This enables better control of the power tool in unexpected situations.

- g. **Dress properly. Do not wear loose clothing or jewellery.** Keep your hair, clothing, and gloves away from moving parts.
- h. **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** Use of dust collection can reduce dust-related hazards.

#### 4. Power Tool Use and Care

- a. **Do not force the power tool.** Use the correct power tool for your application.
- b. **Do not use the power tool if the switch does not turn it on and off.** A power tool that cannot be controlled with the switch is dangerous and must be repaired.
- c. **Disconnect the power source and/or the battery pack from the power tool before making any adjustments, changing accessories or storing power tools.** Such preventive measures reduce the risk of starting the power tool accidentally.
- d. **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** Power tools are dangerous in the hands of untrained users.
- e. **Power tools must be properly maintained.** Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
- f. **Use the power tool and accessories in accordance with these instructions, taking into account the working conditions and the work to be performed.** Use of the power tool for operations different from those intended could result in a hazardous situation.

#### 5. Service

- a. **Have your power tool serviced by a qualified repair person using only identical replacement parts.** This will ensure that the safety of the power tool is maintained.

## 1.0 GENERAL INFORMATION

### 1.1 System Components

The E-RAD BLU Tool System is shipped from New World Technologies Inc. with the following parts:

- E-RAD BLU Tool Handle (Figure 1.1-1)
- E-RAD BLU Controller; Weatherproof (Figure 1.1-2) or Steel Case
- Tool Handle Cable (Figure 1.1-3)
- AC Power Cable (Figure 1.1-4)
- Standard Reaction Arm (Figure 1.1-5) and Snap Ring
- USB A to B Cable for data transfer
- Calibration Certificate
- User Manual

**Note:** Some distributors may ship additional parts along with the E-RAD BLU Tool System.



Figure 1.1-1: E-RAD BLU Tool Handle



Figure 1.1-2: E-RAD BLU Controller



Figure 1.1-3: Tool Handle Cable



Figure 1.1-4: AC Power Cable



Figure 1.1-5: Reaction Arm

## 1.2 Specifications

### 1.2.1 Torque Ranges

Table 1.2.1-1 lists the torque specifications of E-RAD BLU tool models with Imperial and Metric units.

E-RAD BLU Model	Range (Foot-Pounds)	Range (Newton-Metres)
E-RAD BLU 700 / 950-M	100 – 700	135 – 950
E-RAD BLU 1500 / 2000-M	200 – 1500	270 – 2000
E-RAD BLU 2500 / 3400-M COMP	250 – 2500	340 – 3400
E-RAD BLU 3000 / 4000-M	500 – 3000	675 – 4050
E-RAD BLU 6000 / 8000-M	1000 – 6000	1350 – 8100
E-RAD BLU 7500 / 10k-M	1500 – 7500	2030 – 10000
E-RAD BLU 11k / 15k-M	3000 – 11000	4050 – 15000

Table 1.2.1-1: Torque Ranges

### 1.2.2 Electrical Specifications

Ensure that all Electrical Specifications are observed when using the E-RAD BLU Tool System.

	Units	120V Model	230V Model
<b>Nominal Input Voltage</b>	VAC	120	208 – 240
Minimum Input Voltage	VAC	80% of Calibration Voltage	
Maximum Input Voltage	VAC	110% of Calibration Voltage	
Input Frequency	Hz	50 – 60	
<b>Nominal Tool Voltage</b>	VDC	160	328
Minimum Tool Voltage	VDC	80% of Calibration Voltage	
Maximum Tool Voltage	VDC	110% of Calibration Voltage	
<b>Nominal Input Current</b>	ARMS	5	5
<b>Peak Tool Input Current</b>	ARMS	15	15

Table 1.2.2-1: Electrical Specifications

### 1.2.3 Environmental Specifications



#### CAUTION!

Only operate the E-RAD BLU Tool System if the following environmental storage and operation specifications have been met.

	All Models	
	°C	°F
<b>Ambient Operating Temperature Range</b>		
Minimum	-20	-4
Maximum	40	104
<b>Storage Temperature Range</b>	-25 to 70	-13 to 158
<b>Humidity</b>	10% to 90% non-condensing	
<b>Area</b>	No flammable gases or vapours permitted in area.	
<b>Shock</b>	10G according to DIN IEC 68-2-6/29	
<b>Vibration</b>	1G, 10-50Hz according to DIN IEC 68-2-6/69	

Table 1.2.3-1: Environmental Specifications

### 1.2.4 Cycle of Operation

A Cycle of Operation or a Tool Cycle is defined as:

- 10 seconds On (Forward or Reverse)
- 5 seconds Off

## 2.0 POWER REQUIREMENTS

The installer of this equipment is responsible for complying with National Electrical Code (NEC) or equivalent and Federal and Local Guidelines and Application Codes that govern protection, Earth Grounding, disconnects, and other current protection for electrical equipment for use in outdoor or indoor applications.

The following sections outline the power requirements of the E-RAD BLU Tool System.

### 2.1 AC Mains Power



#### DANGER!

Electrical Shock can cause serious or fatal injury. Ensure the E-RAD BLU Controller and Tool Handle are properly Earth Grounded before turning on the Power Switch. Do not touch any power device or electrical connection or remove the E-RAD BLU Controller Top Plate before ensuring the Power Switch is in the Off Position, the AC Mains Power has been disconnected, and no high voltage is present.

New World Technologies Inc. does not recommend replacing the supplied AC Power Cable. If using a different power cable or a power plug adapter, ensure the Earth Ground pin is present and firmly connected.



#### WARNING!

Ensure all AC Mains wiring to the E-RAD BLU complies with National and Local Electrical Codes. Improper wiring may result in unsafe conditions for equipment and personnel.

The E-RAD BLU Controller requires model specific single phase 120VAC or 230VAC. Refer to Section 1.2.2 – Electrical Specifications.

The single phase line must be electrically symmetrical with respect to Earth Ground. The branch circuit must be a dedicated 15A circuit to ensure proper tool operation and to avoid circuit loading and nuisance trips.

**Note:** The E-RAD BLU Controller is internally fused for self-protection. Contact New World Technologies Inc. Technical Support for assistance if a blown fuse is suspected.

## 2.2 Earth Grounding Safety



### **IMPORTANT!**

Earth Grounding is the primary electrical shock protection and is mandatory!

The E-RAD BLU is assembled with a dedicated earth ground connection to the Tool Handle and Controller via the AC Mains Power Connection.

It is the operator's responsibility to adhere and follow, at minimum, an Assured Grounding Program and all National and Local Electrical Codes.

## 2.3 Ground Fault Circuit Interrupt (GFCI)

GFCI (also known as RCD – Residual Current Device) units are secondary protection devices which protect against electric shock in case of a ground wiring fault. E-RAD BLU tools are safe as per CE/CSA certification; the leakage current is less than 1mA. Ground leakage currents of 1mA are within Class A GFCI standard. The E-RAD BLU Tool System is compatible with Class A GFCI units.

**Note:** National and Local Electrical Codes may require use of GFCI. Check National and Local Electrical Codes for compliance.

## 2.4 Extension Cords

Extension cord quality and condition is important to ensure personal safety and tool performance. Check National and Local Electrical Codes for compliance.

For extension cords under 9 metres (30 feet), 12AWG is recommended; for extension cords over 9m (30ft), 10AWG is recommended.

30 metres (100 feet) is the maximum recommended length for extension cords, although some installations demand longer cords. Longer extension cords will reduce the voltage supplied to the E-RAD BLU Tool System and may cause nuisance trips at higher torque demand.

## 2.5 Power Cycling

If AC power has been shut off from the E-RAD BLU, it should not be reapplied for at least one minute. This allows the input surge protection to perform properly. Power cycling too quickly can cause nuisance trips and reduce the lifetime of the electronics.

# 3.0 TOOL SYSTEM OVERVIEW

## 3.1 Tool Handle Description

Multiple Tool Handles may be operated using the same E-RAD BLU Controller. The Controller will display and use the tool options, saved presets, and custom settings depending on which handle is connected.

**Note:** Some custom features may require an updated Controller program to function. Contact Us for more information.

The Tool Handle (Figure 3.1-1) is activated by a trigger switch and direction is controlled by a Forward/Reverse switch. On each side of the tool housing is an LED Status Display (Figure 3.1-2) which indicates when the tool is ready for use, when the torque cycle has passed or failed, or if an error has occurred.



1. Forward/Reverse Switch – direction control.
2. On/Off Trigger – motor activation.



Figure 3.1-1: E-RAD BLU Tool Handle

3. System Ready – blue LED lit when ready for use.
4. Failed – red LED lit when torque cycle failed. Overtorque – red LED flashes when torque cycle overtorqued.
5. Passed – green LED lit when torque cycle passed.

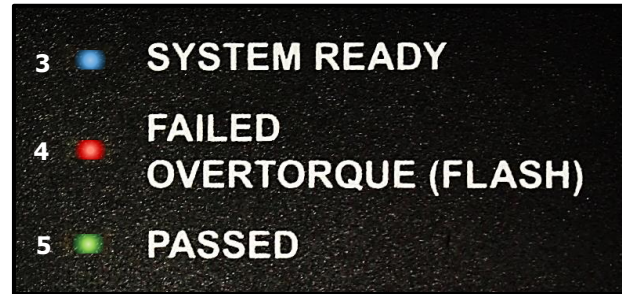


Figure 3.1-2: LED Status Display

### 3.2 Controller Description

The E-RAD BLU Controller has a touch screen interface for changing settings, viewing torque results and logs, and viewing tool information. The AC Power and Tool Handle cables are connected on the right side of the controller housing. Details are shown in Figures 3.2-1 and 3.2-2.

1. Tool Handle connector
2. USB charging connector
3. AC Mains connector (120V or 230V)



Figure 3.2.1: Controller Cable Connectors

4. Optional custom Serial Port
5. USB communication port
6. Network communication port
7. Power switch
8. LCD Touch Display
9. Controller serial number



Figure 3.2-2: Controller Top Plate

### 3.3 Touch Display Interface

The Touch Display Interface is described in the following sections.

The basic functions you need to know before starting are described in Section 4.0 – Common Functions. Features for more advanced applications are covered in Section 5.0 – Tool Functions. Tool operation procedures are covered in Section 7.0 – General Operating Instructions.



### CAUTION!

LCD Touch Displays are susceptible to mechanical shock. Excessive force on the Touch Display may result in damage.

LCD Touch Displays can be damaged by moisture or water and high temperatures. Avoid such conditions when storing and gently wipe clean or let dry before usage.

### 3.3.1 Main Screen

The Main Screen (Figure 3.3.1-1) is used to control basic Torque and Angle functions of the E-RAD BLU Tool System. From the Main Screen, you can access the Main Menu, the Presets Menu, Torque and Angle Settings, Smart Socket settings, and DataLogs. The Access Level (see Section 3.4 – User Access Levels) is indicated by a coloured letter near the top-left of the screen.

The Controller Temperature (left) and the Handle Temperature (right) are displayed near the bottom of the screen. When either the Controller Temperature or the Handle Temperature exceed 85°C, the Tool Handle will be disabled until the temperature drops below 75°C.



Figure 3.3.1-1: Main Screen

### 3.3.2 Menus

To open the Main Menu, select the “Menu” button from the Main Screen.

When selecting an option from a menu, press the number to the left of the option. Menus may contain several screens. To view the different pages of a menu, use the arrow buttons at the bottom of the screen.

### 3.3.3 The “SS” Icon

The SS (Smart Socket/Sensor) icon in the top left of the screen displays the status of the torque sensor/transducer. It will display one of the following:



**Grey:** indicates the Bluetooth® module has been disabled or a handle is not connected.



**Red:** indicates that the Controller recognizes the Bluetooth module in the handle, but is not connected to a Smart Socket. If Sensor Mode is not enabled, the E-RAD will operate normally (see Section 5.11 – Sensor Mode).



**Yellow:** indicates that the Controller has found a Smart Socket and is in the process of connecting to it. **DO NOT** use the Tool during this process. See Section 9.2 – Connecting to a Smart Socket: Troubleshooting if the Smart Socket does not connect within one minute.



**Blue:** indicates that the Controller is connected to a Smart Socket and is ready to be used. Actual Torque readings will be displayed in light blue to indicate readings from the Smart Socket.

Refer to Section 5.1 – Connecting to a Smart Socket for more information.

**Note:** “Sensor Info” in the Tool Information Menu will show information about the hardware, software, and Bluetooth connection when a Smart Socket is connected. Refer to Section 4.7.1 – View Tool Information.

### 3.4 User Access Levels

The E-RAD BLU implements four Access Levels: Locked, Basic, Intermediate, and Advanced. Access to the highest three levels requires a passcode. Each level has a different passcode and enables access to different functions. An icon at the top of the Main Screen confirms which Access Level is enabled. Table 3.4-1 outlines the functions available to each level. These functions are described in detail in this user manual.

Table 3.4-2 lists the Access Levels and provides the Basic passcode.

Function	Level			
	Locked 	Basic 	Intermediate 	Advanced 
Select a Preset	YES	YES	YES	YES
Setup DataLogs	YES	YES	YES	YES
View DataLogs	YES	YES	YES	YES
View Tool Information	YES	YES	YES	YES
View Tool Statistics	YES	YES	YES	YES
View Diagnostics	YES	YES	YES	YES
Smart Socket Settings	NO	YES	YES	YES
Change Set Torque	NO	YES	YES	YES
Change Set Angle	NO	YES	YES	YES
Modify Presets	NO	YES	YES	YES
Change Torque Units	NO	YES	YES	YES
PC Connect / Transfer	NO	NO	YES	YES
Enable/Disable Angle Mode	NO	NO	YES	YES
Enable/Disable Point Calibration	NO	NO	YES	YES
Enable/Disable Operator Password	NO	NO	YES	YES
Enable/Disable Graphing	NO	NO	YES	YES
Enable/Disable Hide Result	NO	NO	YES	YES
Clear Maintenance Statistics	NO	NO	YES	YES
Change Back-Off Angle	NO	NO	YES	YES
Point Calibration	NO	NO	YES	YES
Blue Calibration	NO	NO	YES	YES
Enable/Disable Auto Lock	NO	NO	NO	YES
Enable/Disable Reverse Confirmation	NO	NO	NO	YES
Enable/Disable Trigger Stop	NO	NO	NO	YES
Enable/Disable Sensor Mode	NO	NO	NO	YES
Low Pre-Torque	NO	NO	NO	YES
Torque Check	NO	NO	NO	YES
Calibration Adjust	NO	NO	NO	YES
Maintenance Cycle Lock/Warn	NO	NO	NO	YES
Maintenance Count Threshold Torque	NO	NO	NO	YES
Set System Clock	NO	NO	NO	YES
Network Settings	NO	NO	NO	YES
Factory Settings	NO	NO	NO	YES
Tool Calibration	NO	NO	NO	YES

Table 3.4-1: User Access Levels and Functions

**Note:** The E-RAD BLU Tool System is shipped from factory in Basic Level. After configuration, it is recommended that the tool be locked for normal bolting operations to avoid inadvertent changes to Tool Settings and Calibration.

Access Level	Passcode
Basic/Locked	14504
Intermediate	Contact your RAD Distributor.
Advanced	

Table 3.4-2: Access Levels and Passcodes

### 3.4.1 Unlocking Access Levels

**To Unlock an Access Level:**

1. Select "Menu" from the Main Screen.
2. Select the "Lock" or "Unlock" option from the Main Menu (Figure 3.4.1-1).
3. A number pad will be displayed (Figure 3.4.1-2).

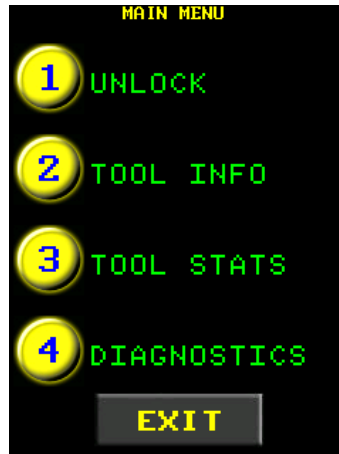


Figure 3.4.1-1: Main Menu



Figure 3.4.1-2: Number Pad

4. Enter the password for the desired Access Level (see Section 3.4 – User Access Levels).
5. Press "✓" to confirm the password or "✗" to backspace or cancel.
6. If a wrong password was entered, an "INCORRECT" message will be displayed (Figure 3.4.1-3). If the password is correct, the display will return to the Main Screen and the desired Access Level will be unlocked (Figure 3.4.1-4).

**Note:** The Lock Icon in the top of the screen is replaced with the corresponding indicator letter.



Figure 3.4.1-3: Incorrect Password Message



Figure 3.4.1-4: Main Screen in Basic Unlock

### 3.4.2 Returning to the Locked Level

**To return to the Locked Access Level:**

1. Select "Menu" from the Main Screen.
2. Select the "Lock" option from the Main Menu (Figure 3.4.2-1).
3. A number pad will be displayed (Figure 3.4.2-2).
4. Enter the password "14504".
5. Press "✓" to confirm the password or "✗" to correct.

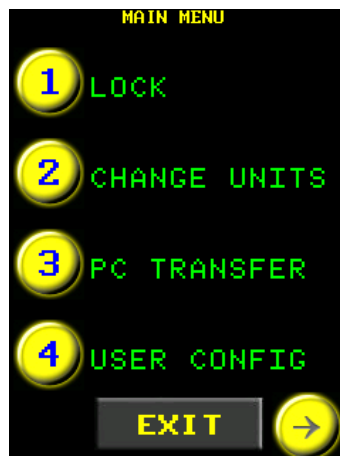


Figure 3.4.2-1: Main Menu

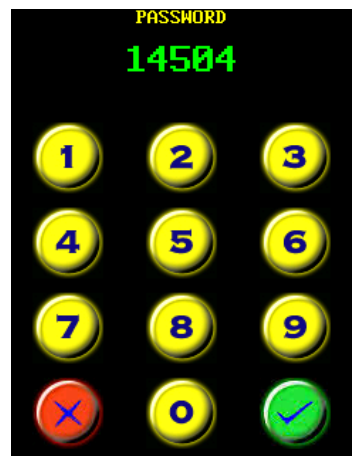


Figure 3.4.2-2: Number Pad

- If the Touch Display was in the Basic Level, the tool will be locked. If the display was in any other level, it will now be in Basic. Input the code "14504" again to lock the tool.

**Note:** The Lock Icon is displayed at the top of the screen (Figure 3.4.2-3).



Figure 3.4.2-3: Main Screen in the Locked Level

### 3.5 Connecting the Tool Components



#### **DANGER!**

Electrical shock can cause serious or fatal injury. Ensure E-RAD BLU Controller and Tool Handle are properly Earth Grounded before turning on the Power Switch.



#### **CAUTION!**

Do not connect or disconnect the electrical connectors while the power switch is turned on. Damage to the Tool or Controller may occur.

**Follow the instructions below to safely connect the E-RAD BLU Tool System components.**

- Refer to Section 2.0 – Power Requirements and ensure compliance before connecting the Tool Handle or AC Power Cable to the Controller.
  - Connect the Tool Handle to the Controller with the Tool Handle Cable.
  - Ensure the AC Mains Supply is Earth Grounded.
  - Ensure the AC Power Cable is in good condition, has no cuts or breaks in the cable insulating jacket, and the plug pins and Earth Ground are present and in good condition.
  - Ensure the Power Switch is in the Off Position.
  - Connect the AC Power Cable to the AC Mains Connector on the right side of the Controller and to the AC Mains Supply. Ensure the correct voltage is being supplied.
  - Check that the E-RAD BLU Controller and Tool Handle are properly Earth Grounded.
- The E-RAD BLU Tool System is ready to power on.

### 3.6 Start-Up With No Handle

When the Controller is turned on without a handle, the options and settings related to the handle will be disabled. The Main Screen (Figure 3.6-1) will not show the Handle Temperature or the Preset button, the grey "SS" icon will appear, and the "Default" Log will be selected unless a custom Log was set previously. The unit will start up in the Locked Access Level.

If the Access Level is unlocked, the Menu options corresponding to the tool handle are disabled. This will prevent settings from being changed that are saved on the handle. Figures 3.6-2, 3.6-3, and 3.6-4 show the Main Menu in Advanced Level without a handle.



Figure 3.6-1: Main Screen; No Handle Connected

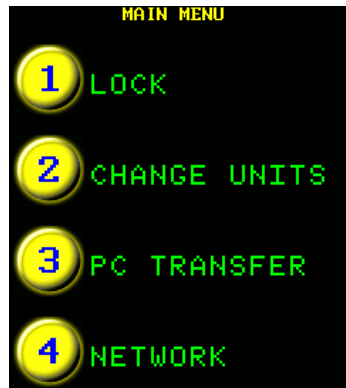


Figure 3.6-2: First screen



Figure 3.6-3: Second Screen



Figure 3.6-4: Third Screen

## 4.0 COMMON FUNCTIONS

### 4.1 Select a Preset

Presets are Torque and/or Angle values stored in a list that allow the operator to quickly change the Torque and Angle. The Presets are held on the Tool Handle. See Section 4.4 – Modify Presets to create a Preset.

#### To select a Preset:

1. Select "Preset" from the Main Screen.
2. Select "Load Preset" from the Preset Menu (Figure 4.1-1).
3. Select the desired Preset from the list displayed. Figure 4.1-2 is an example of the Load Preset Screen.
4. The Main Screen will change the Set Torque and Set Angle to the Preset values. Any other settings stored in the Preset will also be changed.



Figure 4.1-1: Preset Menu

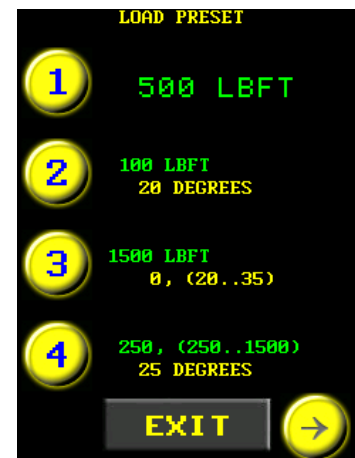


Figure 4.1-2: Load Preset Menu

An **Application Preset** is a pre-defined Set Torque and Set Angle value that allows the operator to quickly select a Set Torque and Set Angle for a specific application. These are stored in the Controller instead of the Tool Handle. Application Presets may include extra information such as short descriptions or bolt count.

**Note:** The "App Presets" button only appears in the Preset Menu when App Presets are installed on the Controller. To install or modify App Presets, refer to Section 8.7 – Edit Applications. For more information, see the E-RAD Touch DataLogger User Manual.

#### To select an Application Preset:

1. Press the "Presets" button on the Main Screen.
2. Select "App Presets" from the Preset Menu (Figure 4.1-3).
3. Select the desired Application from the App Presets Menu (Figure 4.1-4).
4. Select the desired Preset from the list (Figure 4.1-5).

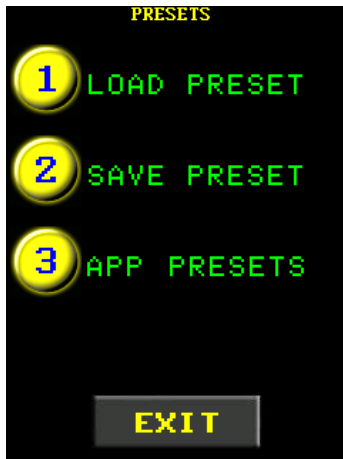


Figure 4.1-3: Preset Menu



Figure 4.1-4: Application Menu

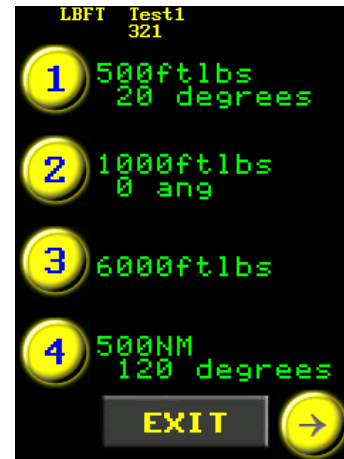


Figure 4.1-5: Preset Selection

**Note:** If the Application Preset has a torque that is above the Maximum Torque of the tool or below the Minimum Torque of the tool, a warning, "Preset Value Not Accepted" will be displayed and the torque will not be changed. Torque values lower than the minimum may be used if a Low Pre-Torque is set up (see Section 5.12 – Low Pre-Torque).

## 4.2 Change the Set Torque

The Set Torque is the actual torque value at which the tool will stop and the cycle is considered a pass. For more information on the Set Torque and Torque Cycles, refer to Section 7.2 – Torque Only Operation.

**Note:** Set Torque cannot be changed while in the Locked Access Level. Presets must be used instead.

### To change the Set Torque:

1. Press the "Set Torque" button on the Main Screen.
2. A number pad will be displayed (Figure 4.2-1).
3. Enter the new Set Torque.
4. Press "✓" to confirm the new Set Torque or "✗" to correct.

**Note:** If the entered value is less than the Minimum Torque, it will be reset to the Minimum. If the entered value is greater than the Maximum Torque, it will be reset to the Maximum. To enter values lower than the Minimum (only with Angle), Low Pre-Torque values must be used (see Section 5.12 – Low Pre-Torque).

5. The new Set Torque will be displayed on the Main Screen (Figure 4.2-2).

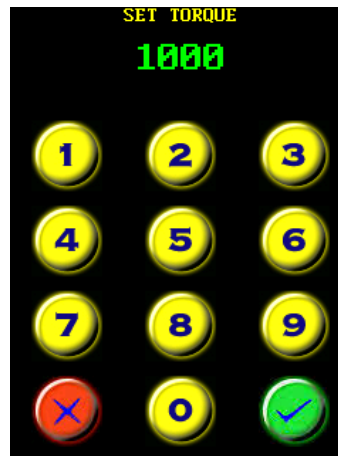


Figure 4.2-1: Number Pad



Figure 4.2-2: New Set Torque

## 4.3 Change the Set Angle

The Set Angle is the actual rotation angle at which the tool will stop and the cycle will be considered a pass. For more information on the Set Angle and Angle Cycle, see Section 7.3 – Angle Only Operation.

**Note:** To change the Set Angle, Angle Mode must be enabled. Refer to Section 5.3 – Angle Mode.

**Note:** Set Angle cannot be changed while in the Locked Access Level. Presets must be used instead.

**To change the Set Angle:**

1. Press the "Set Angle" button on the Main Screen. A number pad will be displayed (Figure 4.3-1).
  2. Enter the new Set Angle.
- Note:** The Set Angle range is 0 – 600 degrees. Values above 600 degrees will be corrected to 600.
3. Press "✓" to confirm the new Set Angle or "✗" to correct.
  4. The new Set Angle will be displayed on the Main Screen (Figure 4.3-2).



Figure 4.3-1: Number Pad



Figure 4.3-2: New Set Angle

## 4.4 Modify Presets

This function allows you to modify any of 16 Presets. For more information on using Presets, refer to Section 4.1 – Select a Preset.

**To modify a Preset:**

1. Change the Set Torque and Set Angle to the desired values (refer to Sections 4.2 – Change the Set Torque and 4.3 – Change the Set Angle) and modify any other settings.

**Note:** If Angle Mode is disabled, the saved Preset will contain only a Set Torque.

2. Presets may include Angle Torque limits (Section 5.17 – Torque Limits), Torque-only Angle Limits (Section 5.18 – Angle Limits), or Point Calibrated torque (Section 5.15 – Point Calibration).
3. Press the "Preset" button on the Main Screen.
4. Select "Save Preset" from the Presets Menu (Figure 4.4-1).
5. The Save Preset screen will be displayed (Figure 4.4-2).
6. Select the desired Preset to be overwritten.



Figure 4.4-1: Preset Menu

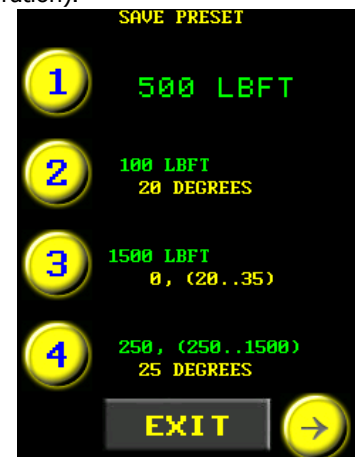


Figure 4.4-2: Save Preset Screen

**Note:** The Set Torque and Set Angle values previously stored in the selected Preset will be overwritten.

**Note:** Presets are saved on the Tool Handle, not the Controller. Changing the Tool Handle will result in different Presets.

## 4.5 Setup a DataLog File

This function allows you to create and select custom DataLog files to record torque results. The default DataLog file is named using the serial number of the Tool Handle. New DataLog files will be created on the Controller for each handle that is connected.

**Note:** DataLogs are stored on the Controller. You can download logs from the Controller to a computer (see Section 8.4 – Downloading All DataLogs).

**To create a new DataLog file:**

1. Press the DataLogs button (folder icon) located at the top of the Main Screen.



2. Choose **"Select Log"** from the DataLog Menu (Figure 4.5-1).
3. The Select Log screen will be displayed and the currently selected Log will be shown at the top of the screen and highlighted in the list of DataLogs (Figure 4.5-2).
4. Press the **"New"** button. An alpha-numeric keypad will be displayed (Figure 4.5-3).

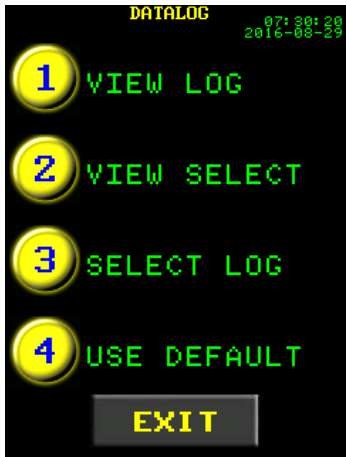


Figure 4.5-1: DataLog Menu

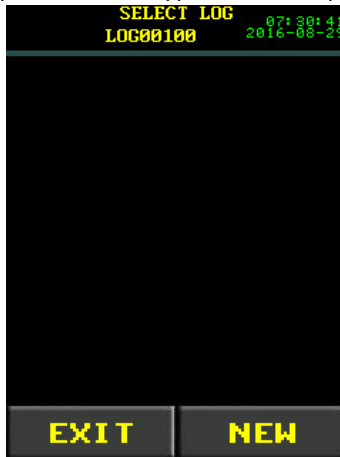


Figure 4.5-2: Select Log Screen



Figure 4.5-3: Alpha-Numeric Keypad

5. Enter the desired log name using the keypad.

**Note:** Press a key several times to cycle through the available characters on that key. The "1" key includes the characters "\_" and "-". The cursor will move to the next position after a 1 second delay.

6. Press "✓" to accept the file name or "✗" to delete the previous character.
7. If the DataLog file name already exists, you will be prompted to continue the existing log (Press "✓") or choose another file name (Press "✗"). See Figure 4.5-4.
8. The new DataLog file name (or the continued existing one) will be displayed at the top of the Main Screen (Figure 4.5-5).

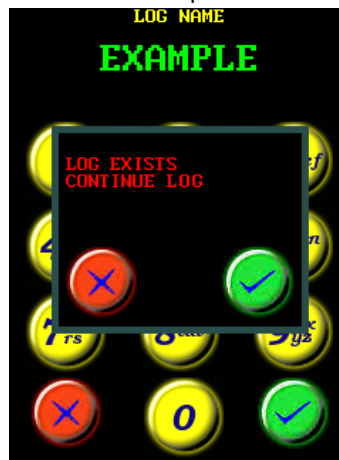


Figure 4.5-4: DataLog Already Exists Prompt



Figure 4.5-5: Main Screen with New DataLog Displayed

**To select a different DataLog file:**

1. Press the DataLogs button (folder icon) located at the top of the Main Screen.
2. Choose "Select Log" from the DataLog Menu, shown in Figure 4.5-6.

**Note:** To use the default log, select "Use Default" from the DataLog Menu. The default log name is set to the tool handle serial number.

3. The log list will be displayed with the current log highlighted (Figure 4.5-7).
4. Select a DataLog.
5. Press the "Exit" button. The display will return to the DataLog Menu.

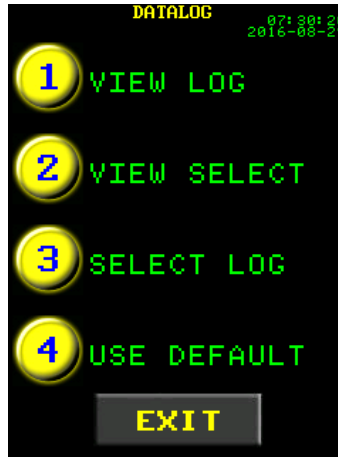


Figure 4.5-6: DataLog Menu

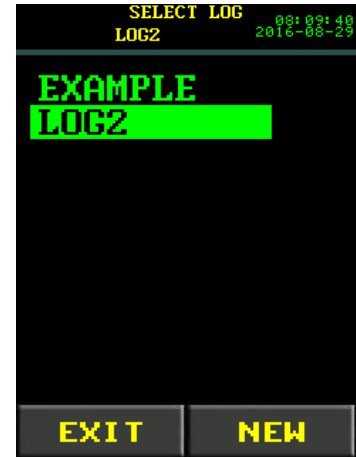


Figure 4.5-7: Select Log Screen

6. Press the "Exit" button to return to the Main Screen. The selected DataLog will be displayed at the top of the Main Screen.

**Note:** When a custom log is selected, it will be used by the Controller regardless of the tool handle connected. When "Use Default" is selected, the default log (using the serial number of the handle) will be selected.

## 4.6 View a DataLog File

**To view the currently selected DataLog file:**

1. Select the DataLogs button (folder icon) located at the top of the Main Screen.
2. Select "View Log" from the DataLog Menu (Figure 4.6-1).
3. View individual cycle records using the left and right arrows at the bottom of the screen.

**Note:** The log records will be green for passed cycles (Figure 4.6-2) or red for failed or invalid cycles (Figure 4.6-3).

4. Press the "Exit" button to return to the Main Screen.

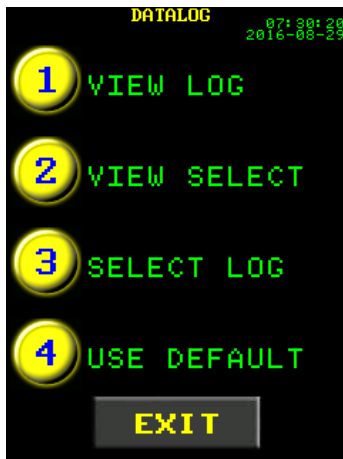


Figure 4.6-1: DataLog Menu

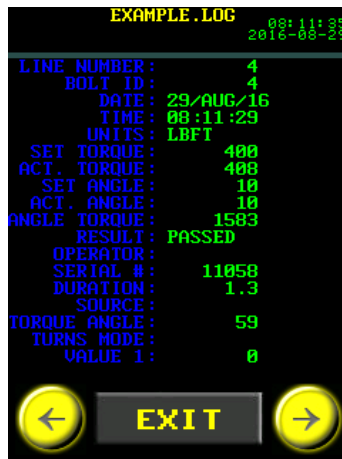


Figure 4.6-2: Passed Cycle

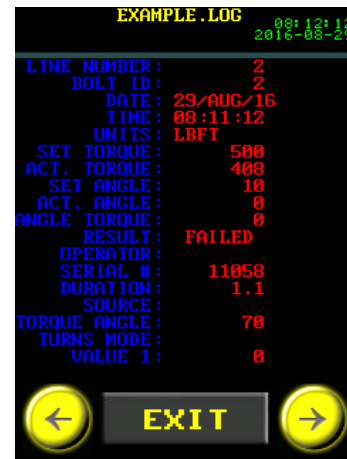


Figure 4.6-3: Failed Cycle

**To view a DataLog not currently selected:**

1. Select the DataLogs button (folder icon) at the top of the Main Screen.
2. Select **"View Select"** from the DataLog Menu (Figure 4.6-1).
3. Select the log that you want to view (Figure 4.6-4).
4. Press the **"Exit"** button.
5. View individual cycle records using the left and right arrow keys at the bottom of the screen.
6. Press the **"Exit"** button to return to the DataLog Menu.

**Note:** If a DataLog file contains no logs, a "Log is Empty" message will be displayed. Select a different log or add cycles to the log before viewing. If another log is selected and used while an empty log exists, the empty log will be deleted.

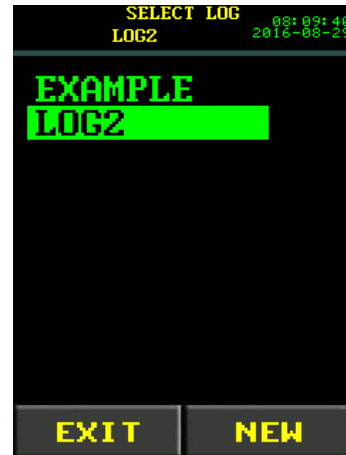


Figure 4.6-4: Select Log Screen

## 4.7 Information Functions

### 4.7.1 View Tool Information

This function allows you to view details about the Controller, the Tool Handle, and the Sensor/Smart Socket.

**To access the Information Menu:**

1. Select "Menu" from the Main Screen.
2. Select "Tool Info" from the Main Menu. The Tool Information Menu will appear (Figure 4.7.1-1).



Figure 4.7.1-1: Tool Information Menu

**To view the Controller information** (Figure 4.7.1-2):

- Select "Case Info" from the menu.

The following information is displayed:

- Controller Serial Number
- Tool model
- Motor Drive information
- Controller firmware and hardware information
- IP Address and Gateway (if network connected)
- Error count

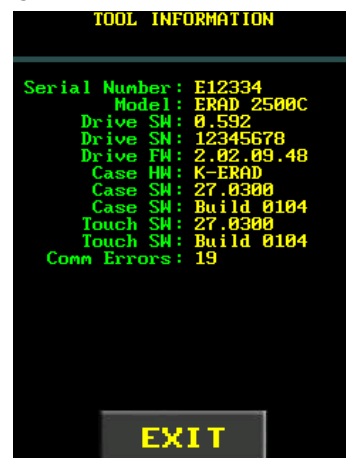


Figure 4.7.1-2: Controller Information

**To view the Tool Handle information** (Figure 4.7.1-3):

- Select "Handle Info" from the menu.

The following information is displayed:

- Tool Handle Serial Number
- Handle firmware information
- Tool model
- Calibration voltage
- Factory Calibration Date
- Customer Calibration Date (if Calibration was modified)
- Total Cycles
- Maintenance Cycles
- Minimum Torque
- Maximum Torque

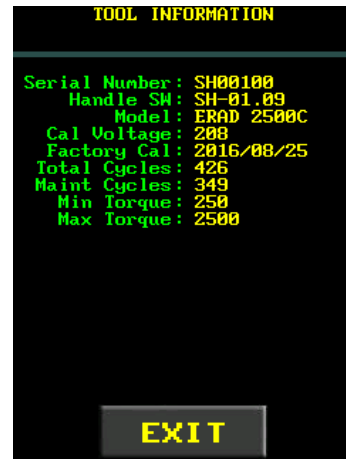


Figure 4.7.1-3: Handle Information

**To view the Sensor or Smart Socket information** (Figure 4.7.1-4):

- Select "Sensor Info" from the menu.

The following information is displayed:

- Socket serial number (if connected)
- Socket model
- Socket firmware information
- Bridge (Bluetooth module) firmware information
- Socket maximum torque



Figure 4.7.1-4: Sensor Information

## 4.7.2 View Tool Statistics

These menus allow you to view torque statistics and errors recorded on the Tool Handle and Controller.

**To view the Tool Statistics:**

1. Select "Menu" from the Main Screen.
2. Select "Tool Stats" from the Main Menu (Figure 4.7.2-1).
3. The Tool Statistics Menu will be displayed (Figure 4.7.2-2).

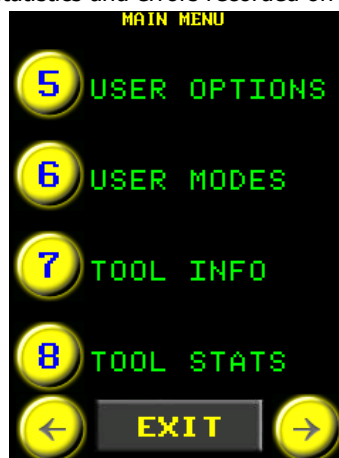


Figure 4.7.2-1: Main Menu



Figure 4.7.2-2: Statistics Menu

**Lifetime Stats** (Figure 4.7.2-3) lists information recorded since the manufacture date. The following information is listed:

Stored on Handle:

- Total torque cycles (forward and reverse cycles are counted)
- Cycles counted between 0-20%, 20-80%, and 80-100% of the tool's torque range
- Over Torque cycles above maximum torque

Stored on Controller:

- Under Voltage errors
- Over Voltage errors
- Drive Overload errors
- Over Temperature errors

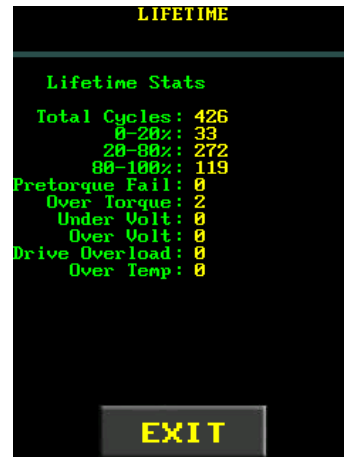


Figure 4.7.2-3: Lifetime Statistics

**Maintenance Stats** (Figure 4.7.2-4) lists information recorded since maintenance was done. If the Maintenance Cycles were cleared at some time (see Section 5.20 – Clear Maintenance Statistics), the cycles recorded here will be less than in Lifetime Statistics.

The same information is listed as in Lifetime Statistics.

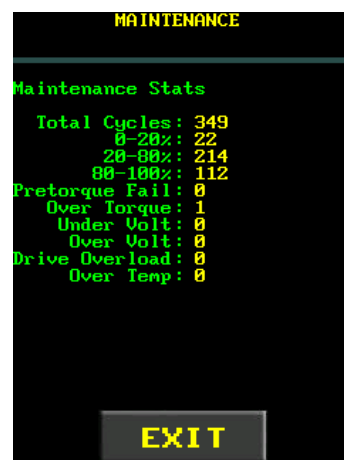


Figure 4.7.2-4: Maintenance Statistics

**Error Log** (Figure 4.7.2-5) lists all errors that have occurred on the Controller. If no errors have occurred, a "No Errors" message will appear.

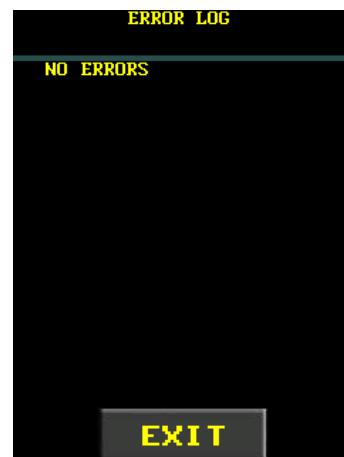


Figure 4.7.2-5: Error Log

### 4.7.3 View Diagnostics

Diagnostics (Figure 4.7.3-1) lists information useful when troubleshooting the E-RAD BLU Tool System. The information includes the following:

- Drive (Controller) temperature
- Minimum voltage since startup
- Line voltage
- Motor current
- Motor position
- Tool velocity (in RPM)
- Peak torque
- Peak current
- Status of the On/Off Trigger, Forward/Reverse Switch, and Elmo controller
- Various diagnostic values
- Sensor Input or Bridge Connection State

**To view the Diagnostics Display:**

1. Select "Menu" from the Main Screen.
2. Select "Diagnostics" from the Main Menu (Figure 4.7.3-2).

**Note:** To return to the Main Screen, press the "Exit" button.

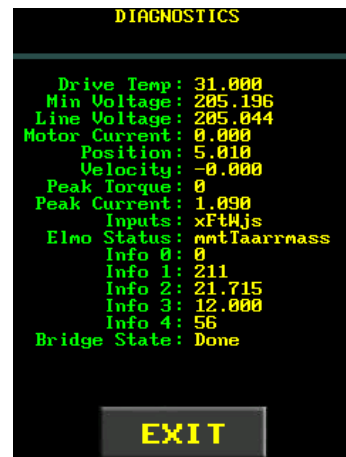


Figure 4.7.3-1: Diagnostics Display



Figure 4.7.3-2: Main Menu

## 5.0 TOOL FUNCTIONS

Refer to Section 3.4 – User Access Levels for more information on the accessibility of these functions. The procedures and figures in this section are from the Advanced access level.

Many options will not be available if the Tool Handle is disconnected (see Section 3.6 – Start-up with No Handle).

### 5.1 Connecting to a Smart Socket

**To connect the E-RAD BLU with a Smart Socket:**

1. Enable Bluetooth on the Smart Socket. Refer to the Smart Socket User Manual Section 5.2 – Connecting the Smart Socket to a PC for instructions.
2. Ensure that "Target Pass/Fail" is disabled on the Smart Socket before using the Smart Socket with the E-RAD BLU. Refer to the Smart Socket User Manual Section 6.2 – Operating Modes for more information.
3. Enable Bluetooth on the E-RAD BLU. Tap the SS icon in the top left of the Main Screen. The Socket Information Screen (Figure 5.1-1) will be displayed.

**Note:** The Socket information screen can also be accessed through the User Configuration Menu.



Figure 5.1-1: Bluetooth Settings

4. Input the Smart Socket serial number and pairing code.

**Note:** The default pairing code is 1111. Refer to the Smart Socket User Manual Section 5.12 – Changing the Bluetooth Pin for information on how to change the pairing code.

**Note:** The “SS” and any leading zeroes in the serial number can be ignored; for example, input “100” for “SS00100.” Entering “0” or toggling the “Bluetooth” button will disable the Bluetooth module.

5. Select “Bluetooth” to turn Bluetooth on or off.

**Note:** If you encounter connection problems, refer to Section 9.2 – Connecting to a Smart Socket: Troubleshooting.

## 5.2 Change the Torque Units

You can choose between Foot-Pound (LbFt) or Newton-Metre (Nm) torque units. When the units are changed, the E-RAD BLU converts the Set Torque value, Preset torque values, and Calibration values to the selected units.

**Note:** The Application Preset list includes torque units, which are used for all the presets in the list. Selecting an Application Preset (see Sections 4.1 – Select a Preset and 8.7 – Edit Applications) may change the torque units.

### To change the torque units:

1. Select “Menu” from the Main Screen.
2. Select “Change Units” from the Main Menu (Figure 5.2-1).
3. Select the desired units from the units menu (Figure 5.2-2).

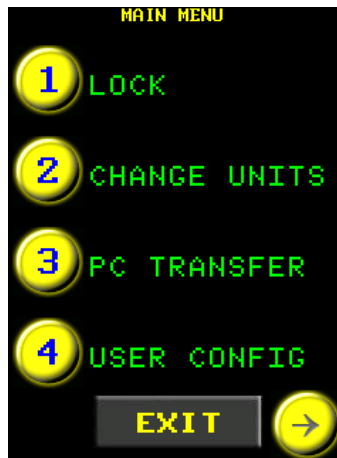


Figure 5.2-1: Main Menu

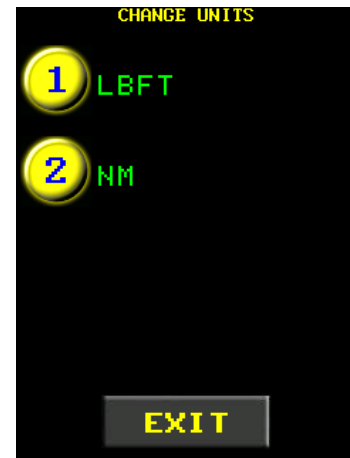


Figure 5.2-2: Select Units

## 5.3 Angle Mode

Angle Mode is used with Angle Only and Torque and Angle operations. With Angle Mode enabled, you can change the Set Angle and use Presets with angle values. Refer to Sections 4.1 – Select a Preset, 4.3 – Change the Set Angle, 4.4 – Modify Presets, 7.3 – Angle Only Operation, and 7.4 – Torque and Angle Operation.

### To enable or disable Angle Mode:

1. Select “Menu” from the Main Screen.
2. Select “User Options” from the Main Menu (Figure 5.3-1).
3. Select “Angle Mode” to toggle Angle Mode on or off (Figure 5.3-2).

**Note:** Angle Mode is enabled when a checkmark is displayed.

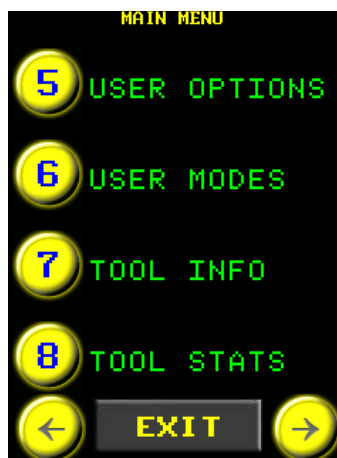


Figure 5.3-1: Main Menu

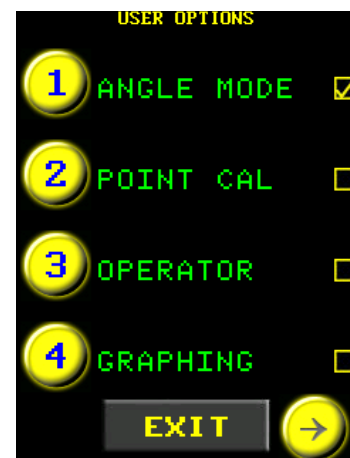


Figure 5.3-2: User Options Menu

## 5.4 Operator Password

The Operator Password function locks out all tool functions until an operator logs in. The operator may log in using one of the passwords in the Operator Password File uploaded to the E-RAD BLU (refer to Section 8.8 – Manage Operator Passwords).

### To enable or disable the Operator Password:

1. Select "Menu" from the Main Screen.
2. Select "User Options" from the Main Menu (Figure 5.4-1).
3. Select "Operator PW" to toggle Operator Password on or off (Figure 5.4-2).

**Note:** Operator Password is enabled when a checkmark is displayed.

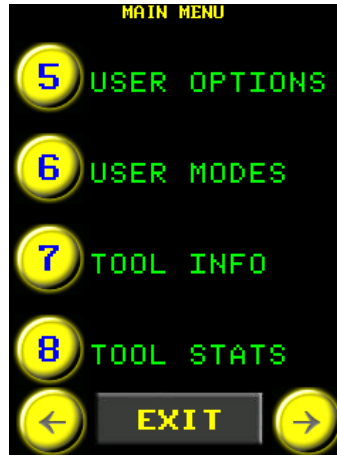


Figure 5.4-1: Main Menu

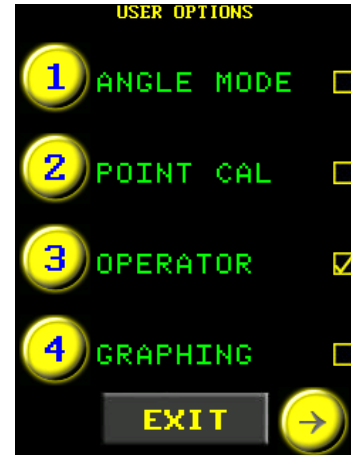


Figure 5.4-2: User Options Menu

### To Login:

**Note:** When the Operator Password function is enabled, the display will remain on the Main Menu and the "Login" option will be displayed. The Main Screen is not displayed until someone logs in.

1. Select "Login" from the Main Menu (Figure 5.4-3). An alpha-number pad will be displayed (Figure 5.4-4).

2. Enter an Operator Password.

**Note:** If an Operator Password File is not loaded on the E-RAD BLU, any combination of characters can be used to login.

3. Press "✓" to confirm or "✗" to correct.
4. The Main Menu will appear and the "Logout" option will be displayed (Figure 5.4-5).

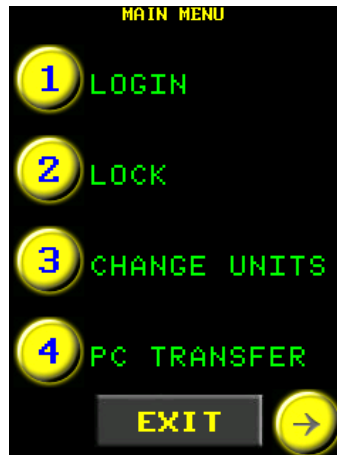


Figure 5.4-3: Main Menu



Figure 5.4-4: Password Keypad

### To Logout:

1. Select "Menu" from the Main Screen.
2. Select "Logout" from the Main Menu (Figure 5.4-5).
3. The display will return to the Main Menu and the "Login" option will be displayed (Figure 5.4-3).

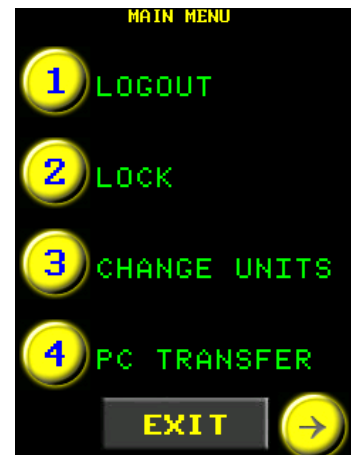


Figure 5.4-5: Main Menu with Logout Option



## 5.5 Torque Graphing

When the E-RAD BLU is connected to a network (see Section 5.23 – Network), the torque curve can be plotted using a PC application.

### To set up Graphing:

1. Select “Menu” from the Main Screen.
2. Select “User Options” from the Main Menu (Figure 5.5-1).
3. Select “Graphing” to toggle Graph Mode on or off (Figure 5.5-2).

**Note:** Graphing is turned on when a checkmark is displayed.

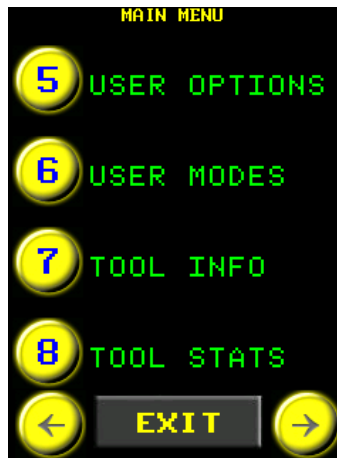


Figure 5.5-1: Main Menu

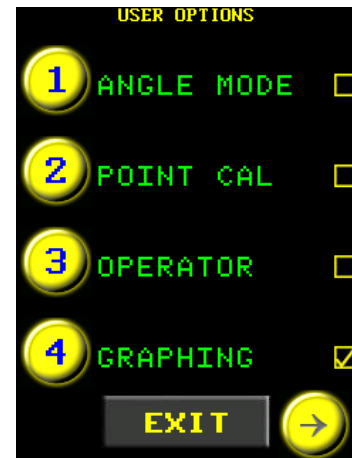


Figure 5.5-2: User Options Menu

When graphing is enabled, the timestamp, tool angle, and measured torque are output via the network connection when a torque cycle is done. The data may be collected on a local computer using *PuTTY*, a networking software package. For more details on data collection and graphing, contact New World Technologies Inc. Technical Support (see Section 10.0 – Contact Us).

## 5.6 Hide Result

The Hide Result option prevents the Actual Torque and Actual Angle values from being displayed after a tool cycle has been completed.

### To enable Hide Result:

1. Select “Menu” from the Main Screen.
2. Select “User Options” from the Main Menu (Figure 5.6-1).
3. Select “Hide Result” to toggle the option on or off (Figure 5.6-2).

**Note:** Hide Result is turned on, meaning the cycle results will not be shown, when the checkmark is displayed.

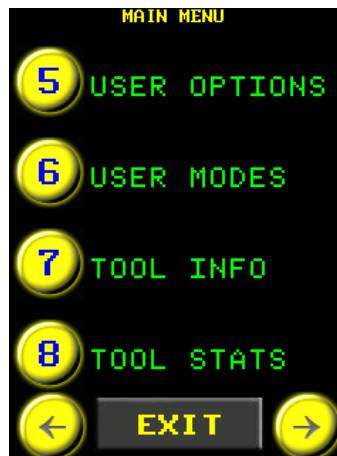


Figure 5.6-1: Main Menu

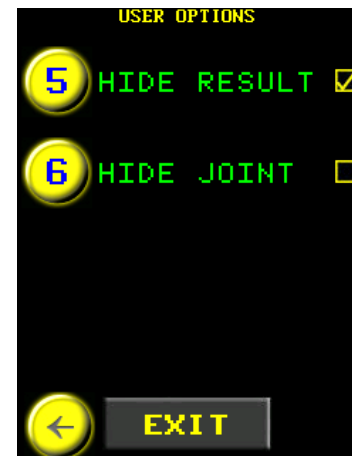


Figure 5.6-2: User Options Menu

After a tool cycle is completed, the final torque and/or angle values are not shown, but “Last Result” may still be selected to view the actual values (see Section 7.5 – Reviewing the Last Result).

## 5.7 Hide Joint

The Hide Joint option prevents just the Actual Angle value from being displayed after a tool cycle has been completed.

**To enable Hide Joint:**

4. Select "Menu" from the Main Screen.
5. Select "User Options" from the Main Menu (Figure 5.7-1).
6. Select "Hide Joint" to toggle the option on or off (Figure 5.7-2).

**Note:** Hide Joint is turned on, meaning the actual angle results will not be shown, when the checkmark is displayed.

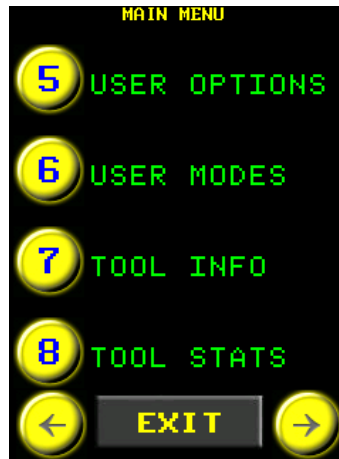


Figure 5.7-1: Main Menu

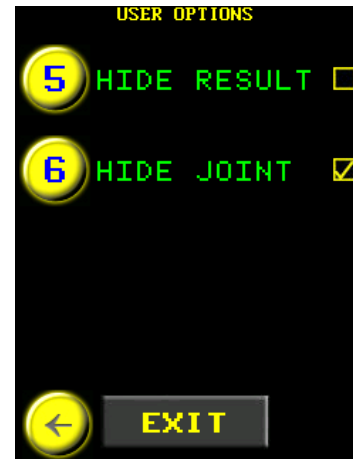


Figure 5.7-2: User Options Menu

### 5.8 Auto Lock

The Auto Lock function forces the Controller to start-up in the Locked Access Level.

**To enable or disable Auto Lock:**

1. Select "Menu" from the Main Screen.
2. Select "User Modes" from the Main Menu (Figure 5.8-1).
3. Select "Auto Lock" to toggle Auto Lock on or off (Figure 5.8-2).

**Note:** Auto Lock is enabled when a checkmark is displayed.

The Controller will not be locked until the power is switched off and on again.

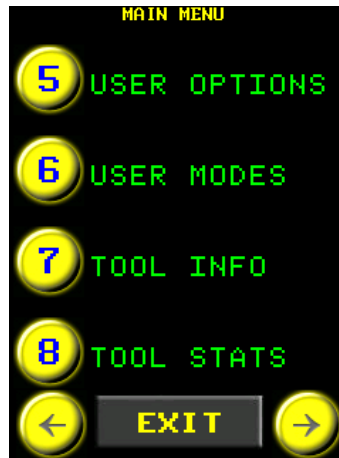


Figure 5.8-1: Main Menu

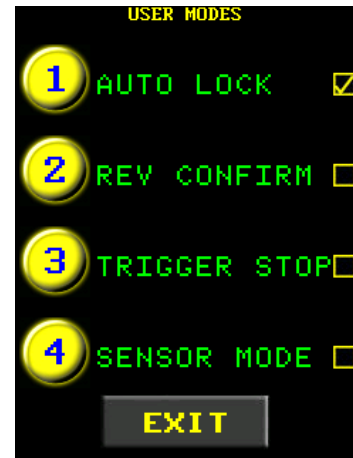


Figure 5.8-2: User Modes Menu

### 5.9 Reverse Confirmation

Reverse Confirmation prevents the tool from being reversed without a confirmation from the user.

**To enable or disable Reverse Confirmation:**

1. Select "Menu" from the Main Screen.
2. Select "User Modes" from the Main Menu (Figure 5.9-1).
3. Select "Rev Confirm" to enable or disable Reverse Confirmation (Figure 5.9-2).

**Note:** Reverse Confirmation is enabled when a checkmark is displayed.

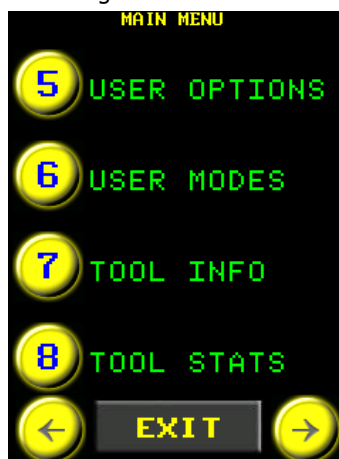


Figure 5.9-1: Main Menu

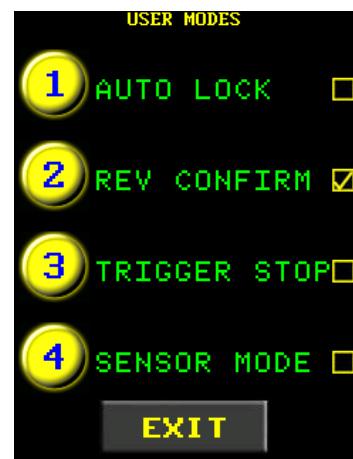


Figure 5.9-2: User Modes Menu

## 5.10 Trigger Stop

This function is a safety feature that prevents the tool from moving when the trigger button is not being pressed.

### To enable or disable Trigger Stop:

1. Select "Menu" from the Main Screen.
2. Select "User Modes" from the Main Menu (Figure 5.10-1).
3. Select "Trigger Stop" to turn the Trigger Stop function on or off (Figure 5.10-2).

**Note:** When a checkmark is displayed, the tool will move only while the trigger is depressed.

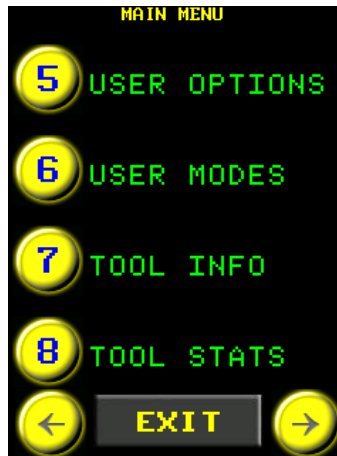


Figure 5.10-1: Main Menu

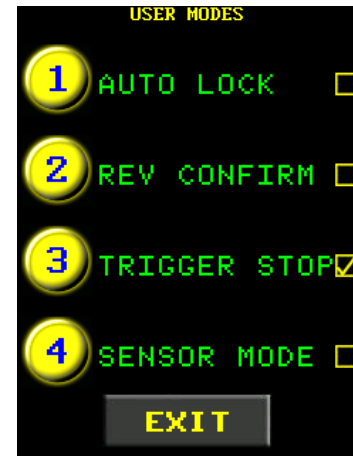


Figure 5.10-2: User Modes Menu

## 5.11 Sensor Mode

Sensor Mode disables the Tool when it is not connected to a Smart Socket. The Tool will be enabled only when it is connected to a Smart Socket through Bluetooth.

### To enable or disable Sensor Mode:

4. Select "Menu" from the Main Screen.
5. Select "User Modes" from the Main Menu (Figure 5.11-1).
6. Select "Sensor Mode" to toggle Sensor Mode on or off (Figure 5.11-2).

When a checkmark is displayed, Sensor Mode is enabled.

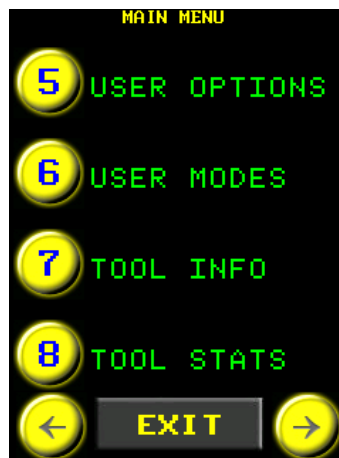


Figure 5.11-1: Main Menu

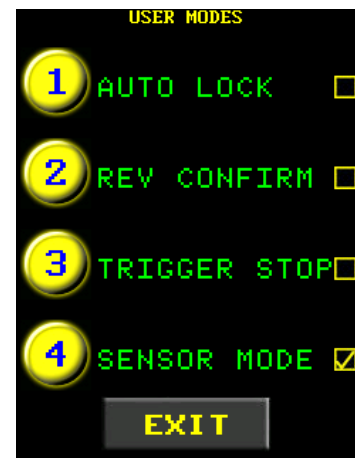


Figure 5.11-2: User Modes Menu

## 5.12 Low Pre-Torque

Low Pre-Torque settings are custom Set Torque values that may be entered on the Main Screen or using a Preset. These values may only be used with Torque and Angle Mode (see Section 7.4 – Torque and Angle Operation). The Low Pre-Torque values may be set lower than the tool's Minimum Torque or greater than the pre-torque limit of 50% Maximum Torque, providing a wider range of torque and angle options.



### CAUTION!

When using a Low Pre-Torque setting over 50% of Maximum Torque, take extra care while doing torque and angle movement and be ready to cancel the cycle. The tool's Maximum Torque may be quickly exceeded while doing an angle movement, especially on hard joint systems.

**Note:** Angle Mode must be enabled to use Low Pre-Torque values. Refer to Section 5.3 – Angle Mode.

### To create a Low Pre-Torque setting:

1. Select "Menu" from the Main Screen.
2. Select "User Config" from the Main Menu (Figure 5.12-1).
3. Select "Low Pretorque" from the User Configuration Menu (Figure 5.12-2).
4. Select one of the Pre Torque slots from the Low Pre Torque Menu (Figure 5.12-3).

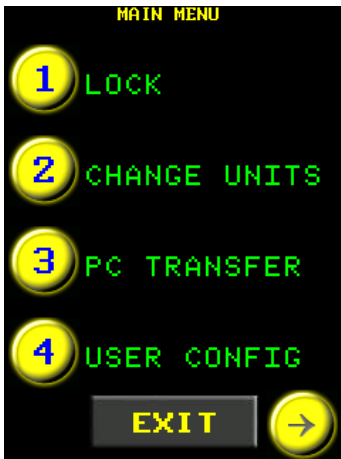


Figure 5.12-1: Main Menu



Figure 5.12-2: User Configuration Menu



Figure 5.12-3: Low Pre-Torque Menu

5. The Pre Torque Adjustment screen will be displayed (Figure 5.12-4).
6. Press the "Torque Value" button on the Pre Torque Adjustment screen. A number pad will be displayed (Figure 5.12-5).
7. Enter the desired Low Pre-Torque Value.
8. Press "✓" to confirm or "✗" to correct.
9. Select "Exit" to return to the Main Screen.



Figure 5.12-4: Low Pre-Torque Adjustment Screen



Figure 5.12-5: Torque Value Keypad

10. Set the Angle to some small value. Verify the Low Pre-Torque setting by changing the Set Torque to the Low Pre-Torque value.

**Note:** The Angle must be set to a non-zero value before a Low Pre-Torque can be selected.

11. Perform a pre-torque cycle and check the actual torque using a transducer. Release the trigger before angle movement starts (see Section 7.4 – Torque and Angle Operation).
12. Calculate the Adjustment Value using the torque measured by the transducer. Use the following equation:

$$\text{Adjustment Value} = \frac{\text{Pre-Torque Value}}{\text{Transducer Torque}} \times 1000 \text{ ‰}$$

13. Select the **"Adjustment"** button on the Low Pre-Torque Adjustment Screen. A number pad will be displayed (Figure 5.12-6).
14. Enter the Adjustment value (a value of 1000 means no adjustment).
15. Press **"✓"** to confirm or **"✗"** to correct.
16. Press the **"Exit"** button at the bottom of the screen.
17. The display will return to the Low Pre-Torque Menu and the modifications will be saved.
18. Press the **"Exit"** button at the bottom to return to the Main Screen.

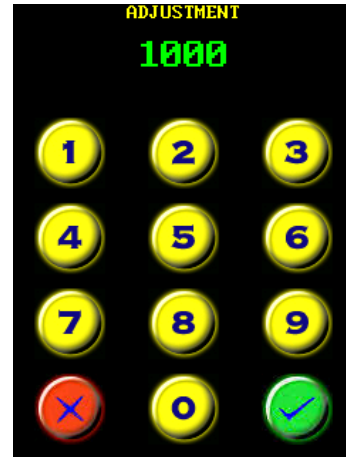


Figure 5.12-6: Number Pad

A Low Pre-Torque value may be saved in a Preset. Refer to Section 4.4 – Modify Presets for more information.

### 5.13 Torque Check

Torque Check mode detects the angle of movement of a fastener and displays the result on the Main Screen. This is useful to check pre-tightened fasteners that need to be verified at the same torque. If the angle is less than the specified value, the cycle result will read "Torque Check." Logs will read "passed" as normal torque pulls. See Section 7.2 – Torque Only Operation for a screenshot of the tool cycle result.

**Note:** The Torque Check Angle value will vary depending on the application. Soft joint systems may require a larger value.

#### To set up Torque Check:

1. Select **"Menu"** from the Main Screen.
2. Select **"User Config"** from the Main Menu (Figure 5.13-1).
3. Select **"Change Values"** from the User Config Menu (Figure 5.13-2).

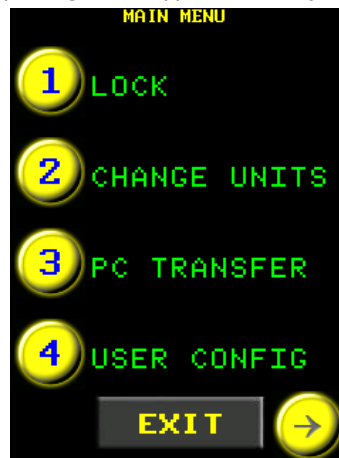


Figure 5.13-1: Main Menu



Figure 5.13-2: User Configuration Menu

4. Select the “**Torque Check**” option from the Change Values menu (Figure 5.13-3). The “Check Angle” keypad is displayed (Figure 5.13-4).
5. Enter an angle value between 0 and 90 degrees. Entering 0 will disable Torque Check.
6. A typical small angle such as 5 degrees is good for checking hard joint systems at the same torque value as was previously applied to the fastener. If the fastener doesn’t move more than this value, the status after the torque cycle is reported as “Torque Check” instead of “Passed.” See Section 7.2 – Torque Only Operation for details on operating a Torque Only cycle on a fastener.



Figure 5.13-3: Change Values Menu

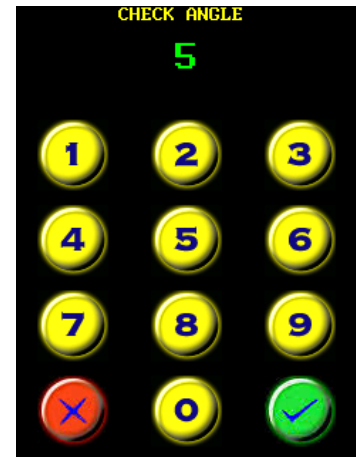


Figure 5.13-4: Check Angle Keypad

### 5.14 Change Tool Back-Off Angle

The E-RAD BLU reverses slightly after a tool cycle has passed to release the tool from the joint. The Back-Off Angle is the angle of reverse rotation, set to 10 degrees by default.

**To change the back-off angle:**

1. Select “**Menu**” from the Main Screen.
2. Select “**User Config**” from the Main Menu (Figure 5.14-1).
3. Select “**Change Values**” from the User Config Menu (Figure 5.14-2).

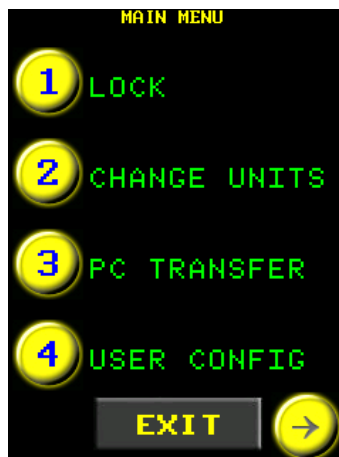




Figure 5.14-1: Main Menu



Figure 5.14-2: User Config Menu

4. Select “**Backoff**” from the Change Values Menu (Figure 5.14-3). A number pad will be displayed (Figure 5.14-4).
5. Enter the new Back-Off Angle, in degrees.

**Note:** Press “” to confirm the new Angle or “” to correct the value or cancel the adjustment.

 
**Note:** The Back-Off Angle must be an angle between 0 and 90 degrees. If the angle is set greater than 90 degrees, the value will change to 90 degrees. You may enter a different Back-Off Angle or press “” to accept 90 degrees.



Figure 5.14-3: Change Values Menu

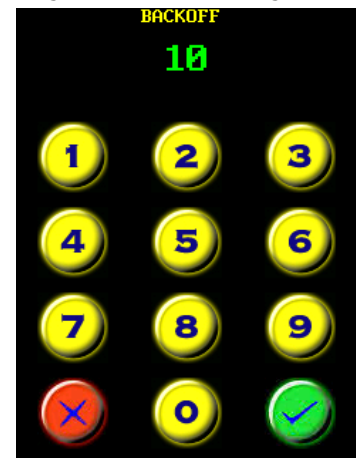


Figure 5.14-4: Backoff Keypad

The new Back-Off Angle will be saved, and the User Configuration Menu will be displayed.

## 5.15 Point Calibration

Point Calibration allows a single torque point to be fine-tuned to suit the needs of an application. When Point Calibration is enabled, the Calibration Adjust value applies to the selected torque point instead of the entire tool range (refer to Section 5.21 – Calibration Adjust). Presets may include a Point Calibrated torque.

Point Calibration may not be used with a Torque and Angle cycle. Instead, use the Low Pre-torque Adjustment to fine-tune a pre-torque value when using angle movement (see Section 5.12 – Low Pre-Torque).

**Note:** Point Calibration does not replace the Tool Calibration. For information on Tool Calibration, refer to Section 6 – Calibration. A full calibration must be done before Point Calibration may be used.

### To enable or disable Point Calibration:

1. Select **"Menu"** from the Main Screen.
2. Select **"User Options"** from the Main Menu (Figure 5.15-1).
3. Select **"Point Cal"** to toggle Point Calibration on or off (Figure 5.15-2).
4. Press **"Exit"** to return to the Main Screen.

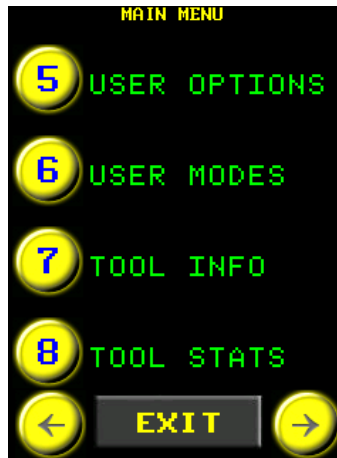


Figure 5.15-1: Main Menu

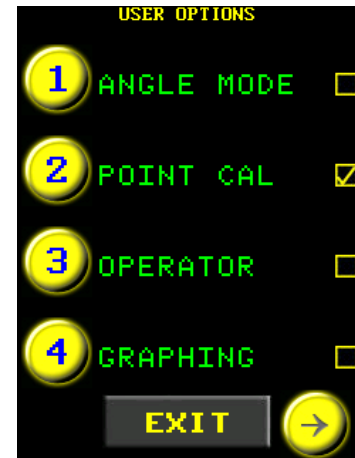


Figure 5.15-2: User Options Menu

### To calibrate a Set Torque point:

1. Ensure Point Calibration is enabled.
2. Mount the E-RAD BLU Tool to a calibration stand.
3. Ensure that the transducer is using the same units as the E-RAD BLU.
4. Set the desired Target Torque on the Main Screen and set the Target Angle to 0.
5. Select **"Menu"** from the Main Screen.
6. Select **"User Config"** from the Main Menu.
7. Select **"Point Cal"** from the User Config Menu (Figure 5.15-3).
8. The Point Calibration screen is displayed (Figure 5.15-4).
9. Operate the tool to complete one torque cycle.



Figure 5.15-3: User Config Menu



Figure 5.15-4: Point Calibration

10. If using a calibration stand, enter the torque read from the transducer. If using a Smart Socket, the Measured Torque will be entered through the Bluetooth connection.
11. Reverse the tool to loosen the joint.
12. Operate the tool for a second torque cycle.
13. Input the torque from the transducer or let the Smart Socket input the measured torque (Figure 5.15-5).
14. Press "✓" to save the Point Calibration.
15. A message will ask to save the Point Calibration results. Press "✓" to save the results or "✗" to discard (Figure 5.15-6).
16. The display will return to the Main Screen (Figure 5.15-7). A target symbol is shown in the top left corner.
17. The Point Calibration will be saved until the torque value is changed or Point Calibration is disabled. Only one torque value may be Point Calibrated at a time unless it is saved in a Preset.



Figure 5.15-5: Point Calibration Screen

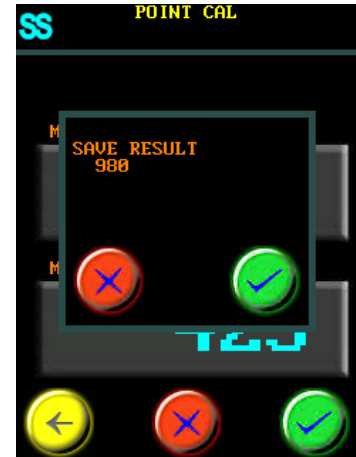


Figure 5.15-6: Save Result Confirmation



Figure 5.15-7: Main Screen, Point Cal Enabled

18. Presets may be saved using point-calibrated torque (see Preset 1 in Figure 5.15-8). A point-calibrated torque value is designated with a star (A Preset will not use the Point Calibrated torque if Point Calibration is disabled). You may save as many Presets with unique Point Calibration data as you like.

**Note:** When Point Cal is enabled, the Cal Adjust value becomes the Point Cal Adjustment value (Figure 5.15-9). This value may be manually changed for Point Calibrated torque values. See Section 5.21 – Calibration Adjust for more information.



Figure 5.15-8: Point Calibration, Preset 1



Figure 5.15-9: Point Cal Adjust



## 5.16 Blue Calibration

Blue Calibration allows you to quickly adjust the Calibration for the tool. This feature is useful in the field when the torque needs to be verified and adjusted for the specific application. Blue Cal adjusts the tool's full torque range without overwriting the original calibration values. This method modifies the Calibration Adjust value (refer to Section 5.21 – Calibration Adjust).

**Note:** Blue Calibration appears in the User Configuration Menu only after a full Tool Calibration has been done and a Smart Socket is connected to the E-RAD BLU.

**Note:** Blue Calibration is not recommended for use above 80% or below 40% of the tool's Maximum Torque. If Blue Calibration is used for a torque value below 40%, an error message will be displayed saying "**Torque too low, Use Point Cal**". Point Cal should be used for any torque below 40%. Refer to Section 5.15 – Point Calibration.

### To perform Blue Calibration:

**Note:** A Smart Socket must be connected to perform this procedure. See Section 5.1 – Connecting to a Smart Socket.

1. Select "**Menu**" from the Main Screen.
2. Select "**User Config**" from the Main Menu (Figure 5.16-1).
3. Select "**Blue Cal**" (Figure 5.16-2). A keypad will be displayed (Figure 5.16-3).

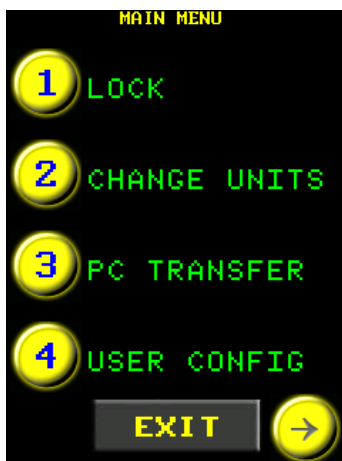


Figure 5.16-1: Main Menu



Figure 5.16-2: User Config Menu

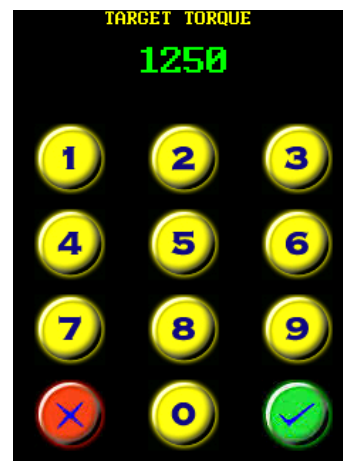


Figure 5.16-3: Target Torque Keypad

4. Enter the desired Target Torque (around 50% of Maximum Torque usually works well).

**Note:** Press "✓" to confirm torque or "✗" to correct.

5. The Blue Calibration screen will be displayed (Figure 5.16-4).
6. Operate the tool to complete one torque cycle.
7. The measured torque will be entered from the connected Smart Socket (Figure 5.16-5).
8. Reverse the tool and perform a second torque cycle.



Figure 5.16-4: Blue Calibration Screen



Figure 5.16-5: Blue Calibration Screen

9. The second measured torque will be entered from the connected Smart Socket (Figure 5.16-6).
10. Press "✓" to accept the Blue Calibration.
11. A message will appear asking to confirm the result as shown. Press "✓" to save the result or "✗" to discard (Figure 5.16-7). The screen will return to the User Configuration Menu.

**Note:** To view or modify the new adjustment value, check the "Cal Adjust" value. Refer to Section 5.21 – Calibration Adjust for more information.



Figure 5.16-6: Blue Calibration Screen

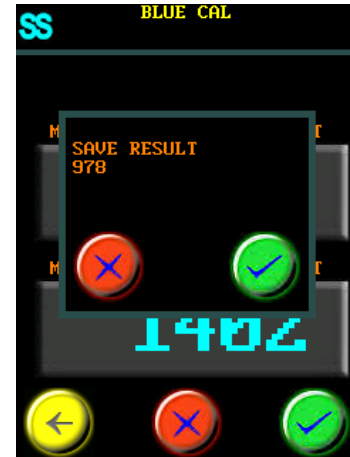


Figure 5.16-7: Save Result Confirmation

## 5.17 Torque Limits

This feature enables torque limits for Angle Only or Torque and Angle cycles. The angle movement stops if the Actual Torque exceeds the Torque Limit. The cycle will pass or fail depending on whether the Actual Torque is within the limited range. Refer to Sections 7.3 – Angle Only Operation and 7.4 – Torque and Angle Operation for more information.

### To modify the Angle Torque Limits:

1. Ensure that Angle Mode is enabled. Refer to Section 5.3 – Angle Mode.
2. Change the Set Angle to a non-zero value (refer to Section 4.3 – Change the Set Angle).

**Note:** If Angle is set to 0, Angle Limits may be set instead of Torque Limits (see Section 5.18 – Angle Limits).

3. Change the Pre-Torque to the desired value (refer to Section 4.2 – Change the Set Torque).

4. Press and hold the "Set Angle" button for 3 seconds. The Torque Limits screen will be displayed (Figure 5.17-1).

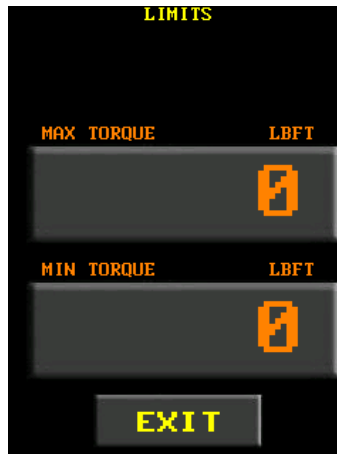


Figure 5.17-1: Torque Limits Screen

5. Set the Minimum and Maximum Torque Limits (Figure 5.17-2). Select the "Min Torque" or "Max Torque" buttons and enter the values using the keypad. Min Torque may be set to 0.

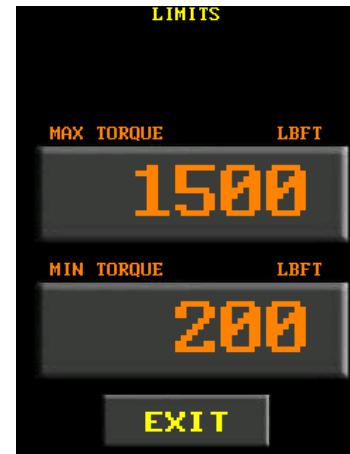


Figure 5.17-2: Set Min and Max Torque Limits

6. Press the "Exit" button to return to the Main Screen.

7. The Final Torque of a cycle must be between the Min Torque and the Max Torque values for the cycle to pass. If the Final Torque is less than the Minimum or exceeds the Maximum, the cycle will fail.

The Torque Limits will be cleared if the Set Torque or Set Angle are changed or a Preset without Torque Limits is selected.

When a Preset is saved, the Angle Torque Limits will also be saved. The list of saved Presets will display the limits beside the Set Torque value (see Presets 1 and 4 in Figure 5.17-3).

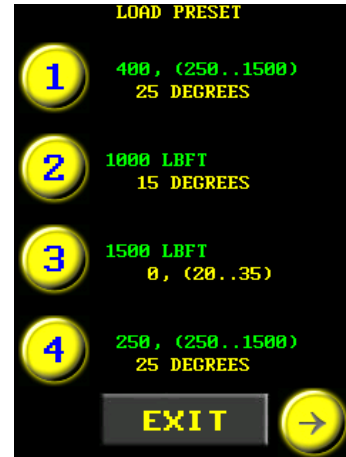


Figure 5.17-3: Presets 1 and 4 with Torque Limits in Brackets

## 5.18 Angle Limits

This feature enables angle limits for a Torque Only cycle. The tool measures the angle movement between Seating Torque and Final Torque and stops if the measured angle exceeds the Angle Limit. The torque cycle will pass or fail depending on whether the Actual Angle is within the limited range. Refer to Section 7.2 – Torque Only Operation for more information.

### To modify the Torque Angle Limits:

1. Change the Set Angle to 0 or disable Angle Mode (refer to Sections 4.3 – Change the Set Angle or 5.3 – Angle Mode).

**Note:** If Set Angle is not 0, Torque Limits may be set instead of Angle Limits (see Section 5.17 – Torque Limits).

2. Change the Set Torque to the desired value (refer to Section 4.2 – Change the Set Torque).
3. Press and hold the “Set Torque” button for 3 seconds. The Angle Limits menu will be displayed (Figure 5.18-1).



Figure 5.18-1: Angle Limits Screen

4. Set the Minimum and Maximum Angle Limits. Select the “Min Angle” or “Max Angle” buttons (Figure 5.18-2) and enter the values using the keypad. Min Angle may be set to 0.

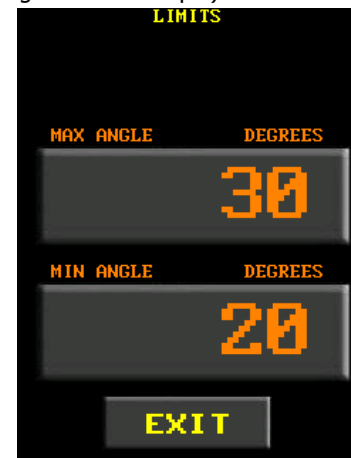


Figure 5.18-2: Set Min and Max Angle

5. Press the “Exit” button to return to the Main Screen.
6. The Actual Angle is the angle measured from Seating Torque to Final Torque. The Actual Angle of a cycle must be between the Min Angle and the Max Angle values for the cycle to pass. If the Actual Angle is less than the Minimum or exceeds the Maximum, the cycle will fail.

The Angle Limits will be cleared if the Set Torque or Set Angle are changed or a Preset without Angle Limits is selected.

When a Preset is saved, the Angle Limits will also be saved. The list of saved Presets will display the limits below the Set Torque (see Presets 2 and 3 in Figure 5.18-3).



Figure 5.18-3: Presets 2 and 3 with Angle Limits in Brackets

## 5.19 Maintenance Cycle Control

The Maintenance options allow administrative control of tool cycles within a maintenance period.

**Note:** The number of maintenance cycles on the tool can be viewed in Handle Info (see Section 4.7.1 – View Tool Information) or Maintenance Statistics (see Section 4.7.2 – View Tool Statistics).

“**Maintenance Lock**” disables the Tool Handle after a number of torque cycles. Maintenance Limit must be set for Maintenance Lock to work. Maintenance Limit may be set without Lock being enabled. The tool will not be disabled.

The “**Maintenance Limit**” value defines how many cycles are done before the “Maintenance Required” message is displayed and/or the tool is disabled.

“**Maintenance Warning**” defines the number of cycles before a warning message is displayed.

“**Maintenance Torque**” restricts the torque threshold over which cycles are counted toward the limit.

**Note:** Reverse and Forward Cycles are counted.

### To enable or disable Maintenance Lock:

1. Select “**Menu**” from the Main Screen.
2. Select “**User Config**” from the Main Menu (Figure 5.19-1).
3. Select “**Maintenance**” from the User Configuration menu (Figure 5.19-2).
4. Select “**Maint Lock**” to enable or disable Maintenance Lock (Figure 5.19-3).

**Note:** When a checkmark is displayed, Maintenance Lock is enabled.

The tool is disabled once the cycle Limit has been reached, until the Maintenance Cycles are cleared.

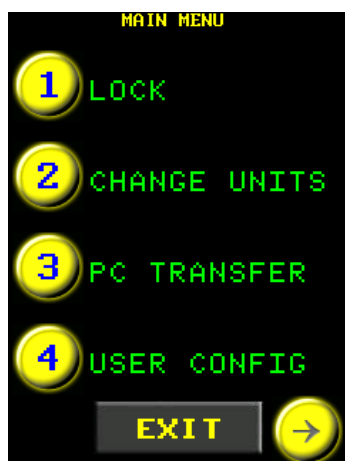


Figure 5.19-1: Main Menu

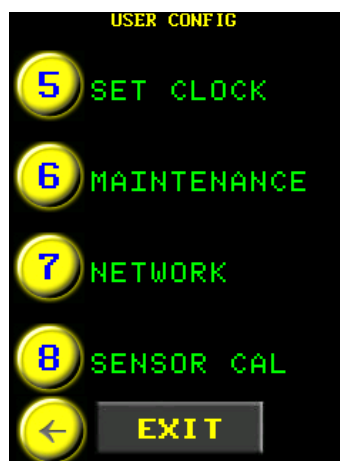


Figure 5.19-2: User Configuration Menu



Figure 5.19-3: Maintenance Menu

**To set the Maint Limit and Maint Warn options:**

**Note:** Maintenance Limit and Warn may be set while Maint Lock is disabled. In that case, the "Maintenance Required" message will be displayed at the specified cycle count, but the tool will not be disabled.

1. Select "Maint Limit" from the Maintenance Menu (Figure 5.19-4).
2. A number pad will be displayed (Figure 5.19-5).
3. Enter the number of cycles to be done before the tool is disabled.
4. Press "✓" to confirm the number of Limit Cycles or "✗" to correct.
5. The display will return to the Maintenance Menu.



Figure 5.19-4: Maintenance Menu



Figure 5.19-5: Enter Maint Limit

A warning may be displayed before the tool is disabled:

6. Select "Maint Warn" from the Maintenance Menu.
7. A number pad will be displayed (Figure 5.19-6).
8. Enter the number of cycles to be done before a warning is displayed (the value should be smaller than Maint Limit).
9. Press "✓" to confirm the Warning Cycles or "✗" to correct. The Maintenance Menu will be displayed with the settings applied (Figure 5.19-7).
10. When the options are set as desired, select "Exit" to return to the Main Screen.



Figure 5.19-6: Enter Maint Warn



Figure 5.19-7: Maintenance Menu

11. You may need to clear the Maintenance Cycles to reset the counter. Refer to Section 5.20 – Clear Maintenance Statistics to do this.

When the Maintenance Cycles reach the specified Warning value, the "Maint Nearing" message will be displayed on the Main Screen (Figure 5.19-8).

When the Maintenance Cycles reach the Limit, the "Maint Required" message will be displayed (Figure 5.19-9). The message will be displayed and the tool will be disabled until the Maintenance Cycles are cleared (See Section 5.20 – Clear Maintenance Statistics).



Figure 5.19-8: Maintenance Warning



Figure 5.19-9: Maintenance Required

**To set the Maintenance Count Torque Threshold:**

1. Select **"Maint Torque"** from the Maintenance Menu.
2. A number pad will be displayed (Figure 5.19-10).
3. Input the percentage of Maximum Torque above which Maintenance cycles will be counted.

**Example:** A maximum torque of 2500 LbFt and a desired threshold of 1000 LbFt yields  $\frac{1000}{2500} = 40\%$  of maximum. Then, all torque cycles over 1000 LbFt will be counted.

4. Press the "✓" button to save the value. A message is displayed asking to clear Maint Stats. If you press "✗", the total Maintenance Cycles are cleared but the individual ranges are kept. If you press "✓", all of the Maintenance Cycles are cleared.



Figure 5.19-10: Number Pad



Figure 5.19-11: Maintenance Menu

The display will return to the Maintenance Menu with the setting changed (Figure 5.19-11).

## 5.20 Clear Maintenance Statistics

This function allows you to clear the Maintenance Statistics. This is generally done after maintenance to reset the cycle counters. To view the Maintenance Statistics, refer to Section 4.7.2 – View Tool Statistics.

**To clear Maintenance Statistics:**

1. Select **"Menu"** from the Main Screen.
2. Select **"Tool Stats"** from the Main Menu (Figure 5.20-1).
3. Select **"Clear Maint"** from the Statistics Menu (Figure 5.20-2).
4. Select **"Confirm CLR"** to confirm the clearing the Maintenance Statistics or press the **"Exit"** button to cancel (Figure 5.20-3).

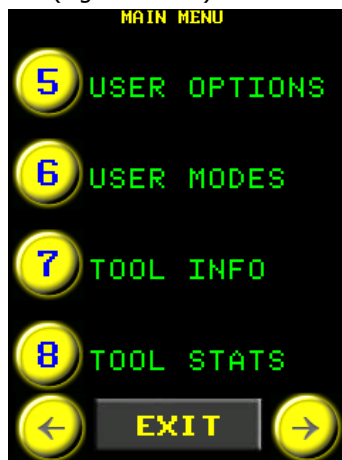


Figure 5.20-1: Main Menu

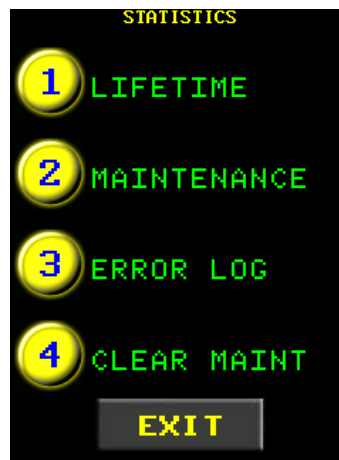


Figure 5.20-2: Statistics Menu



Figure 5.20-3: Confirm CLR Option

5. The Maintenance cycles will be set to 0. The Lifetime Statistics will not be altered.

## 5.21 Calibration Adjust

This function allows you to adjust the Tool Calibration Table. An adjustment value of 1000 leaves the Calibration Table unaltered. The adjustment range is 800 – 1200 (20% lower or higher than original).

**Note:** If **Point Calibration** is enabled, the Calibration Adjust Value applies to a single torque point and will not affect the entire torque range. If Point Cal is enabled, Calibration Adjust is called **"Point Cal Adjust"**. See Section 5.15 – Point Calibration.

**Note:** If Point Cal is disabled and **Blue Cal** is used, the Calibration Adjust value may be modified using Blue Cal and will affect the full torque range. See Section 5.16 – Blue Calibration.

**To adjust the calibration:**

1. Select “Menu” from the Main Screen.
2. Select “User Config” from the Main Menu (Figure 5.21-1).
3. Select “Change Values” from the User Configuration Menu (Figure 5.21-2).

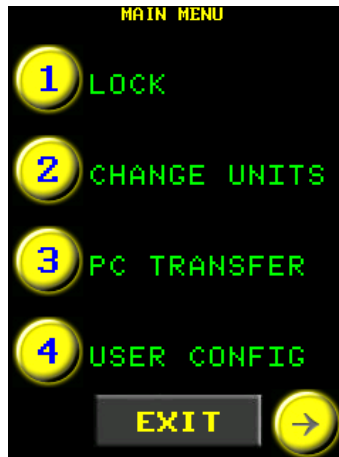


Figure 5.21-1: Main Menu

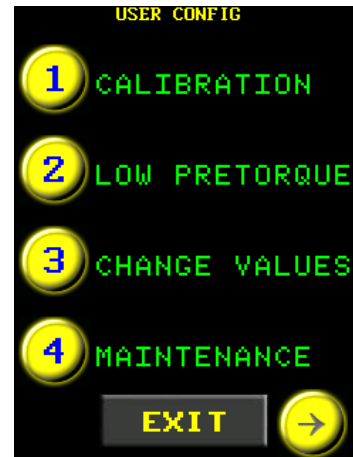


Figure 5.21-2: User Configuration Menu

4. Select “Cal Adjust” from the Change Values Menu (Figure 5.21-3).
5. The adjustment keypad will be displayed (Figure 5.21-4).
6. Enter the Adjustment Value for the Tool’s Calibration.



Figure 5.21-3: Change Values Menu



Figure 5.21-4: Cal Adjustment

If Point Calibration is enabled, the title above the number pad will change to “Point Cal Adjust” (Figure 5.21-5). The Calibration Adjust value will only apply to the selected torque.



Figure 5.21-5: Point Cal Adjust

## 5.22 Set Clock

The date and time may be set on the E-RAD Controller.

### To set Date and Time:

1. Select **"Menu"** from the Main Screen.
2. Select **"User Config"** from the Main Menu (Figure 5.22-1).
3. Select **"Set Clock"** from the User Configuration menu (Figure 5.22-2).
4. Select the values you want to change from "Set Date" or "Set Time" (Figure 5.22-3).
5. A number pad will be displayed for each value. Enter the desired values.

**Note:** For "Year," enter only the last two digits of the year.

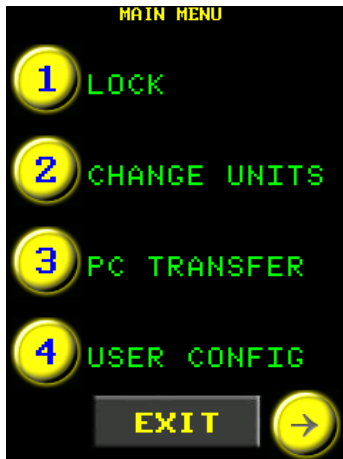


Figure 5.22-1: Main Menu



Figure 5.22-2: User Config Menu



Figure 5.22-3: Date and Time

## 5.23 Network

The Network options provide an alternate way to connect to the E-RAD Touch DataLogger or other PC applications. Refer to Section 8.0 – DataLog PC Operations for more information about the DataLogger.

### To connect the E-RAD BLU using the Network port:

1. Select **"Menu"** from the Main Screen.
2. Select **"User Config"** from the Main Menu (Figure 5.23-1).
3. Select **"Network"** from the User Configuration menu (Figure 5.23-2).

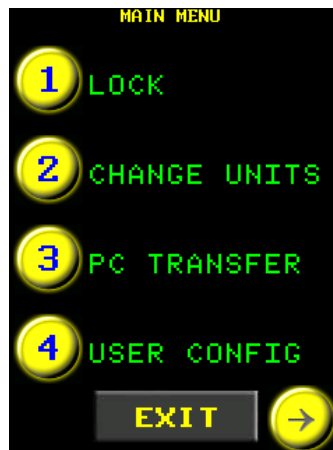


Figure 5.23-1: Main Menu

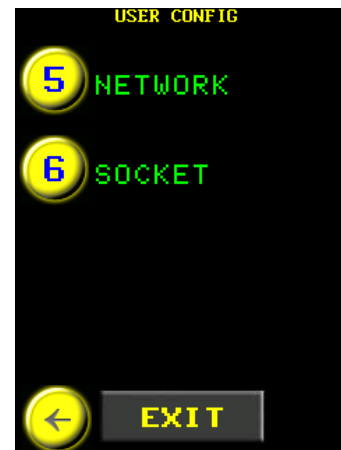


Figure 5.23-2: User Config Menu



4. Select **"Network"** again from the Network menu (Figure 5.23-3).
5. The Network screen will appear (Figure 5.23-4).
6. For automatic IP addressing, set the "IP Net" to "0" and the "IP Node" to "0".
7. For a fixed IP address on the 192.168 private network:
  - a. Change the "IP Net" to the subnet of the IP address.
  - b. Change the "IP Node" to the unit address of the IP address.

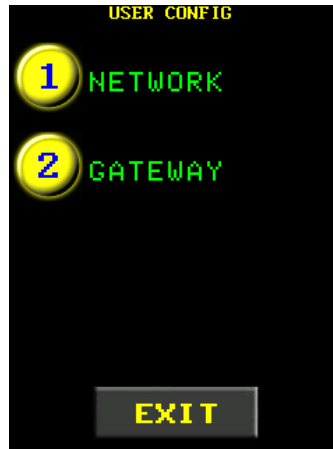



Figure 5.23-3: Network Menu



Figure 5.23-4: Network Screen

**To check the IP Address:**

1. Select "Menu" from the Main Screen.
2. Select "Tool Info" from the Main Menu (Figure 5.23-5).
3. Select "Case Info" (Figure 5.23-6). The IP Address and Subnet will be shown when connected to a network.

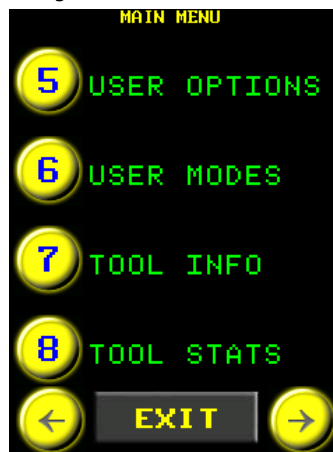

5.23-5: Main Menu



5.23-6: Tool Information Menu

## 5.24 Gateway

The Gateway setting allows the E-RAD BLU Controller to connect to a PC that is on a different network than the default local network. Change the Gateway address only if Static IP addressing is used on the network.

## 5.25 Factory Settings

The Factory Set menu is used to change tool settings including Minimum Torque, Maximum Torque, and Gear Ratio, and enable or disable custom features. These settings should only be used under the direction of New World Technologies Inc. Technical Support.

Contact New World Technologies Inc. Technical Support for more information (see Section 10.0 – Contact Us).

## 6.0 CALIBRATION



**WARNING!**

Only qualified personnel with training in the safe operation of torque tooling and familiar with the E-RAD BLU Tool System should operate this tool.

**CAUTION!**

Do not calibrate at values that result in exceeding the E-RAD BLU Tool System's Torque Range. Severe tool damage will occur.

This function provides access to the Calibration Values of the E-RAD BLU Tool System. The Calibration Values should only be modified by a qualified Calibration Technician with the use of a Calibration Stand.

The Calibration Values represent a relationship between the Actual Output Torque of the E-RAD BLU Tool System and the Set Torque. After changing the Calibration Values, the E-RAD BLU is more accurate.

**To calibrate the E-RAD BLU Tool System:**

1. Select "Menu" from the Main Screen.
2. Select "User Config" from the Main Menu (Figure 6-1).
3. Select "Calibration" from the User Configuration Menu (Figure 6-2).

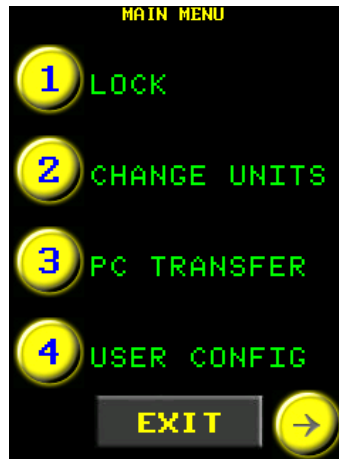


Figure 6-1: Main Menu

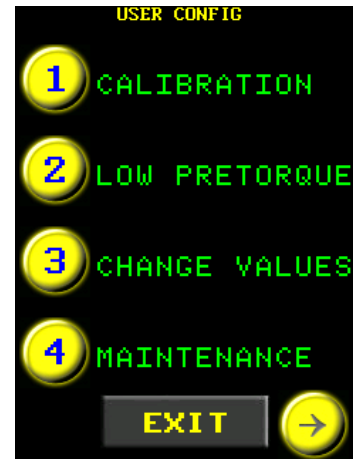


Figure 6-2: User Configuration Menu

4. A message will be displayed asking to enter or cancel Calibration (Figure 6-3).
5. Press the "✓" button to enter Calibration.
6. The 7% Calibration screen will be displayed (Figure 6-4).
7. Mount the E-RAD BLU to the Calibration Stand.
8. Ensure that the Calibration Transducer is set to the same units as the E-RAD BLU Tool System.

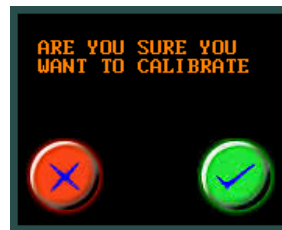


Figure 6-3: Confirm Calibration Prompt

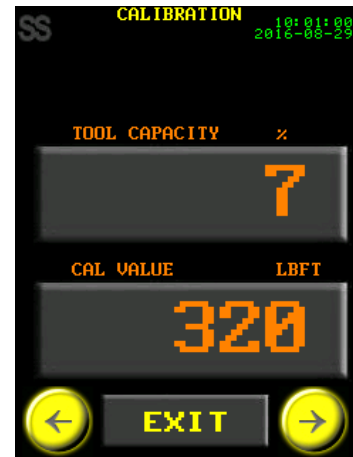


Figure 6-4: Calibration Mode

9. Do one Torque Cycle. Skip steps 10 – 13 if the E-RAD BLU is connected to a Smart Socket via Bluetooth. The torque read from the Smart Socket will be automatically entered. The number will be coloured blue (Figure 6-5).
10. Press the "Cal Value" field on the Calibration Screen (Figure 6-4).

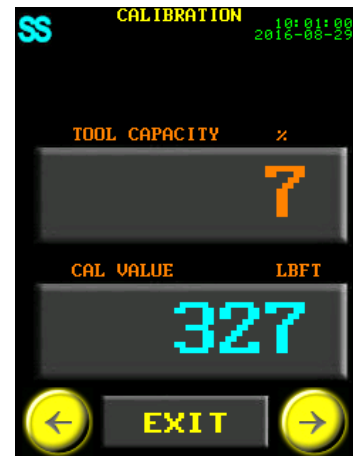


Figure 6-5: Calibration Value from Sensor/Smart Socket

11. A number pad will be displayed (Figure 6-6).
12. Enter the torque measured by the Calibration Stand Transducer.
13. Press "✓" to confirm or "✗" to correct.
14. The next Calibration screen will be displayed.
15. Repeat from step 9 for each tool capacity percentage. Calibrate the points at 7%, 10%, 20%, 30%, 40%, 50%, 60%, and 70%. Be careful not to exceed the Maximum Torque of the tool.

**Note:** Torque cycles may not need to be done for 80%, 90%, and 100% Tool Capacity. These values are extrapolated from the Cal Values of the previous Tool Capacity percentages. The extrapolated values are shaded white.



Figure 6-6: Number Pad

16. Once all the values have been set, press the "Exit" button.
17. You will be prompted to save before exiting (Figure 6-7).
18. Press "✓" to save or "✗" to discard and exit.
19. The display will return to the Main Screen.

**Note:** When the Calibration Values are modified, the date is stored as the User Calibration Date in Tool Information. Refer to Section 4.7.1 – View Tool Information.



Figure 6-7: Save Calibration

## 7.0 GENERAL OPERATING INSTRUCTIONS



### WARNING!

Only qualified personnel with training in the safe operation of torque tooling and the E-RAD BLU Tool System should operate this tool.

The E-RAD BLU Tool System has three operating modes: Torque Only, Angle Only, or Torque and Angle. The use of the Reaction Arm, each of the operating modes, and reviewing cycle results are described in the following sections.

### 7.1 Reaction Arm



### WARNING!

**Always keep body parts clear of the Reaction Arm when the E-RAD BLU Tool System is in use. Serious injury could occur.**

### CAUTION!

Ensure that the Reaction Arm has a solid contact point before operating the E-RAD BLU Tool System. Improper reaction will void warranty and can cause premature tool failure.

Please contact New World Technologies Inc. or your local RAD Authorized Distributor for information on custom Reaction Arms.

### 7.1.1 Installing the Reaction Arm

Ensure that the Reaction Arm and Snap Ring are installed securely to hold the Reaction Arm in place. Make sure that the Reaction Arm is in contact with a solid Reaction Point before you operate the tool. Keep your body parts clear of the Reaction Arm when the tool is in operation.

When the tool is in operation, the Reaction Arm rotates in the opposite direction to the Output Square Drive and must be allowed to rest squarely against a solid object or surface adjacent to the bolt to be tightened (Figure 7.1.1-1).

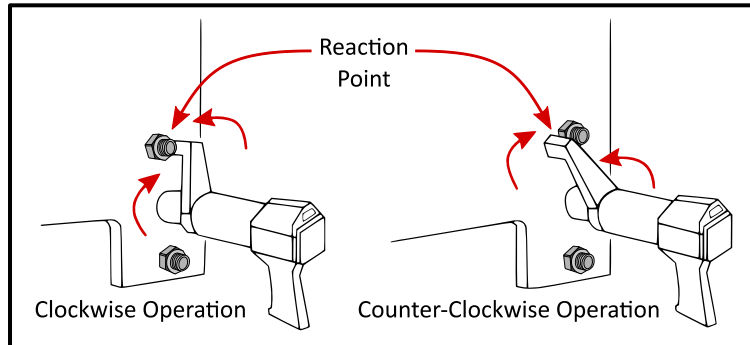


Figure 7.1.1-1 – Reaction Arm Rotation



#### **CAUTION!**

Keep your hands clear of the Reaction Arm and joint when the tool is in operation (Figure 7.1.1-2).

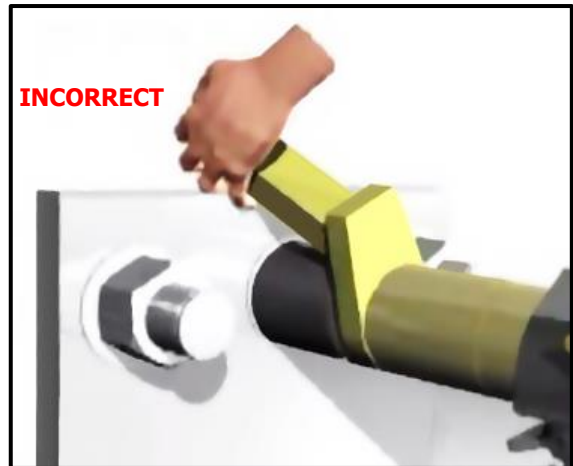


Figure 7.1.1-2: Incorrect Placement of Hand

### 7.1.2 Reaction Arm Height

Ensure that the height of the socket is even with the height of the Reaction Arm (Figure 7.1.2-1).

**CORRECT:** The Reaction Arm and socket are even.

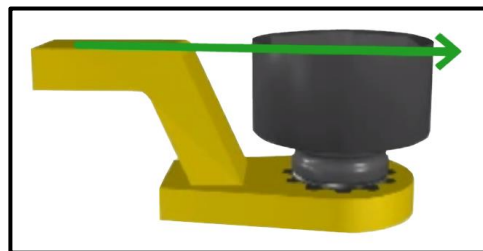


Figure 7.1.2-1: Correct Height

The height of the socket cannot be shorter or longer than the height of the Reaction Arm (Figure 7.1.2-2).

**INCORRECT:** The leg of the Reaction Arm is too short in the left image and too long in the right image.

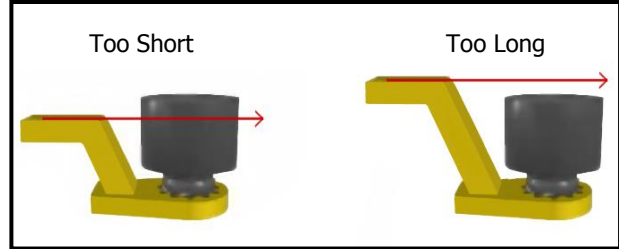


Figure 7.1.2-2: Incorrect Height

### 7.1.3 Reaction Arm Foot

Ensure that the foot of the Reaction Arm aligns with the reaction point (Figure 7.1.3-1).

**CORRECT:** The foot of the Reaction Arm aligns with the reaction point.

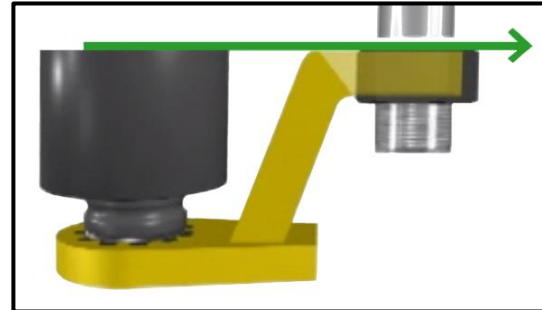


Figure 7.1.3-1: Correct Length

The length of the foot cannot be shorter or longer than the reaction point (Figure 7.1.3-2).

**INCORRECT:** The foot of the Reaction Arm is too short in the left image and too long in the right image.

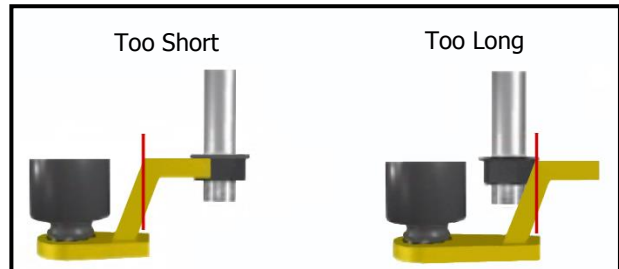


Figure 7.1.3-2: Incorrect Length

### 7.1.4 Reaction Points

Ensure that the Reaction Arm reacts off the middle of the foot (Figure 7.1.4-1).

**CORRECT:** Reaction Arm is reacting off the middle of the Reaction Arm's foot.



Figure 7.1.4-1: Correct Reaction Point

Do not react off the heel of the reaction foot (Figure 7.1.4-2).

**INCORRECT:** Reaction arm is reacting off the heel of the reaction arm. This can cause premature tool failure.

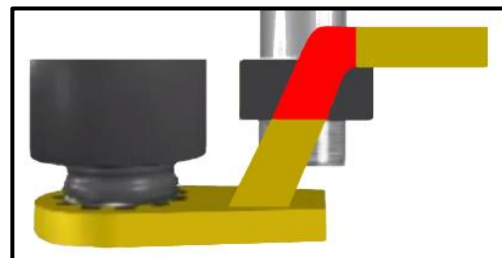


Figure 7.1.4-2: Incorrect Reaction Point

## 7.2 Torque Only Operation

In Torque Only Mode, the E-RAD BLU turns the fastener until the Set Torque has been achieved. The Torque Cycle has passed when the Actual Torque reaches the Set Torque within the tolerance of the tool.

### To operate Torque Only Mode:

1. Change the Set Angle to zero if Angle Mode is enabled, or disable Angle Mode. If the Access Level is Locked, refer to Section 4.1 – Select a Preset. If the E-RAD BLU is in a higher Access Level, refer to Section 4.3 – Change the Set Angle.
2. Change the Set Torque to the desired value. If the Access Level is Locked, refer to Section 4.1 – Select a Preset. If the E-RAD BLU is in a higher Access Level, refer to Section 4.2 – Change the Set Torque.
3. If desired, set Angle Limits (refer to Section 5.18 – Angle Limits) or enable Torque Check (refer to Section 5.13 – Torque Check).
4. Place the E-RAD BLU on the joint system.
5. Set the Forward/Reverse Switch to the Forward position.
6. Ensure that the blue “System Ready” LED is illuminated.
7. Press and hold the Tool Handle On/Off Trigger until the Torque Cycle has passed (the “Passed” LED is illuminated).

**Note:** To stop the E-RAD BLU at any time during the Torque Cycle, release the On/Off Trigger. This will result in an Invalid cycle result.

8. After the Torque Cycle has passed, the E-RAD BLU will reverse slightly to unload the Reaction Arm. Refer to Section 5.14 – Change Tool Back-Off Angle for more information.
9. When the Torque Cycle is finished, the final torque will be displayed on the Main Screen. Figure 7.2-1 shows a passed Torque Cycle and Figure 7.2-2 shows a failed Torque Cycle, showing the actual final torque.



Figure 7.2-1: Passed Torque Cycle

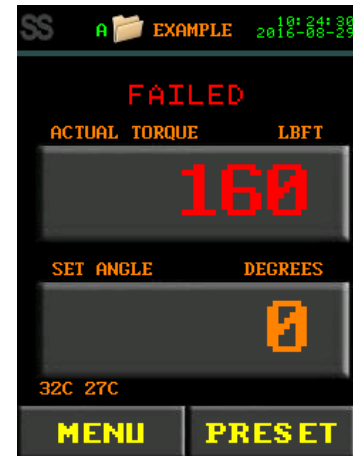


Figure 7.2-2: Failed Torque Cycle

Figures 7.2-3 and 7.2-4 show the Torque Cycle results with a Smart Socket connected. Note that a passed cycle is coloured blue, and a failed cycle is purple.



Figure 7.2-3: Passed Torque Cycle with Smart Socket Result



Figure 7.2-4: Failed Torque Cycle with Smart Socket Result

**Note:** The result will be displayed for 15 seconds or until a new cycle is started.

**Note:** If the trigger is released during the Torque Cycle, a Torque Invalid message will be displayed (Figure 7.2-5).

If Torque Check mode is enabled (see Section 5.13 – Torque Check) and the Actual Angle is within the specified value, the cycle result is “Torque Check” (Figure 7.2-6) and the actual angle moved is displayed. If the Actual Angle is above the specified value, the cycle result is “Passed” as normal operation.



Figure 7.2-5: Torque Invalid Message



Figure 7.2-6: Torque Checked Cycle

### 7.3 Angle Only Operation

In Angle Only Mode, the E-RAD BLU begins angle movement as soon as seated torque is detected. The Angle Cycle has passed when the Actual Angle reaches the Set Angle.

To operate in Angle Only Mode, Angle Mode must be enabled (see Section 5.3 – Angle Mode).

#### To operate Angle Only Mode:

1. Change the Set Torque to zero. If the Access Level is Locked, refer to Section 4.1 – Select a Preset. If the E-RAD BLU is in a higher Access Level, refer to Section 4.2 – Change the Set Torque.
2. Change the Set Angle to the desired value. If the Access Level is Locked, refer to Section 4.1 – Select a Preset. If the E-RAD BLU is in a higher Access Level, refer to Section 4.3 – Change the Set Angle.

**Note:** The Set Angle range is 0 – 600 degrees.

3. If desired, set Torque Limits (refer to Section 5.17 – Torque Limits).
4. Place the E-RAD BLU on the joint system.
5. Set the Forward/Reverse Switch to the Forward position.
6. Ensure that the blue “System Ready” LED is illuminated.
7. Press and hold the Tool Handle On/Off Trigger until the arm has seated. “Arm Seated” will be displayed (Figure 7.3-1).
8. Press and hold the On/Off Trigger until the Angle Cycle has passed.

**Note:** To pause the E-RAD BLU at any time during the Angle Cycle, release the Trigger. Pull the Trigger to continue (within the 5 second timeout).

To cancel the Angle Cycle at any time, release the Trigger or toggle the Forward/Reverse switch. This will result in an invalid Angle Cycle.

The Angle Cycle will stop if the Actual Torque exceeds the Maximum Torque of the tool or the custom Torque Limit (refer to Section 5.17 – Torque Limits).



Figure 7.3-1: Arm Seated Message

9. After the Angle Cycle has passed, the E-RAD BLU will reverse slightly to unload the Reaction Arm. Refer to Section 5.14 – Change Tool Back-Off Angle for more information.

10. When the Angle Cycle has passed or failed, the Actual or Socket Torque and the Actual Angle (total degrees of rotation) will be displayed on the Main Screen. Figure 7.3-2 shows a passed Angle Cycle and Figure 7.3-3 shows a failed Angle Cycle.

**Note:** The result will be displayed for 15 seconds or until a new cycle is started.



Figure 7.3-2: Passed Angle Cycle



Figure 7.3-3: Failed Angle Cycle

## 7.4 Torque and Angle Operation

In Torque and Angle Mode, the E-RAD BLU begins angle movement after achieving a Pre-Torque value. The Torque and Angle cycle passes after both the Actual Pre-Torque and the final Angle reach the set values.

To operate in Torque and Angle Mode, Angle Mode must be enabled (see Section 5.3 – Angle Mode).

### To operate in Torque and Angle Mode:

1. Change the Set Torque to the desired pre-torque value. See Section 4.1 – Select a Preset if the Access Level is Locked, or Section 4.2 – Change the Set Torque if the E-RAD BLU is in a higher level.

**Note:** In Torque and Angle mode, the Set Torque cannot be set above 50% of the tool's Maximum Torque or below the Minimum Torque. To use a pre-torque below the Minimum Torque or above 50% of the tool's Maximum Torque, use a Low Pre-torque setting (Section 5.12 – Low Pre-Torque).

2. Adjust the Set Angle to the desired value by referring to Section 4.1 – Select a Preset, if the Access Level is Locked or Section 4.3 – Change the Set Angle, if the E-RAD BLU is in a higher level.

**Note:** The Set Angle range is 0 – 600 degrees.

**Note:** When both the torque and the angle are set to zero, the reaction arm will seat and a cycle will not be completed.

3. If desired, set Torque Limits (refer to Section 5.17 – Torque Limits).
4. Place the E-RAD BLU on the joint system.
5. Set the Forward/Reverse Switch to the Forward position.
6. Ensure that the blue "System Ready" LED is illuminated.
7. Press and hold the On/Off Trigger until the Pre-torque Cycle has passed. This will occur when the Actual Torque reaches the Set Torque (Figure 7.4-1).

**Note:** To stop the E-RAD BLU at any time during the Pre-torque, release the Trigger. This will result in a failed Torque and Angle Cycle.

8. Press and hold the On/Off Trigger until the Angle Cycle has passed. This will occur when the Actual Angle reaches the Set Angle or the Actual Torque reaches the Maximum Torque of the E-RAD BLU.

**Note:** The Angle Cycle will fail if the Actual Torque exceeds the Maximum Torque of the tool.

9. After the Torque and Angle Cycle has passed, the E-RAD BLU will reverse slightly to unload the Reaction Arm. Refer to Section 5.14 – Change Tool Back-Off Angle for more information.



Figure 7.4-1: Pre-torque Passed



- When the Torque and Angle Cycle has passed or failed, the measured torque and the Actual Angle (rotation after Pre-torque) will be displayed on the Main Screen. Figures 7.4-2 and 7.4-3 show a passed and a failed Torque and Angle Cycle.



Figure 7.4-2: Cycle Passed



Figure 7.4-3: Cycle Failed

Figures 7.4-4 and 7.4-5 show a passed and failed Torque and Angle Cycle with a Smart Socket connected.

The result will be displayed for 15 seconds or until a new cycle is started.

**Note:** Final Torque is the measured torque after the Torque and Angle cycle is complete and will depend largely on the bolting application.



Figure 7.4-4: Passed Torque and Angle with Smart Socket



Figure 7.4-5: Failed Torque and Angle with Smart Socket

## 7.5 Reviewing the Last Result

Last Result allows the operator to review the results of the previous tool cycle performed.

### To review the Last Result:

- The "Last Result" option is displayed on the Main Screen after a torque cycle is made until a new cycle is started or an option is changed.
- Select the "Last Result" text above the Set Torque on the Main Screen (Figure 7.5-1). The Last Result text will be green if the cycle passed or red if the cycle failed or was invalid. With a Smart Socket connected, the text will be blue if the cycle passed or purple if the cycle failed.

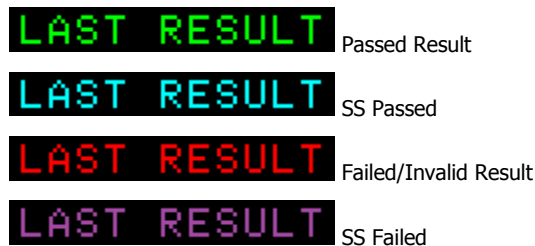


Figure 7.5-1: Last Result Option

- The Actual Torque and/or Actual Angle will appear on the Main Screen the colour indicated.

**Note:** The Last Result values will be displayed for 15 seconds or until a new cycle is started.

## 8.0 DATALOG PC OPERATIONS

The E-RAD Touch DataLogger is a PC software package designed to connect the E-RAD BLU Controller to a computer for data logging and administrative options.

The following operations may be done using the software:

- Setting the Clock on the E-RAD BLU Tool System (Section 8.3 – Setting the Clock)
- Downloading all Data Logs from the E-RAD BLU Tool System (Section 8.4 – Downloading all DataLogs)
- Deleting Data Logs on the E-RAD BLU Tool System (Section 8.5 – Deleting DataLogs from the E-RAD BLU)
- Exporting Data to another program (Section 8.6 – Exporting Data)
- Create and edit Application files for custom operations (Section 8.7 – Edit Applications)
- Create Operator IDs and passwords (Section 8.8 – Manage Operator Passwords)

For more detailed information on the E-RAD Touch DataLogger Software, refer to the E-RAD Touch DataLogger Manual located in the “Help” menu in the DataLogger.

## 8.1 Software Installation and PC Requirements

The E-RAD Touch DataLogger Software can be downloaded from [www.eradtorque.com](http://www.eradtorque.com). Click on “E-RAD Software Download” found in the bottom right of the home page.

**Note:** The “SQLite” download package is for customers with a Windows 8 computer or for those that do not have an existing database (compatible with Windows XP, Windows Vista, Windows 7, and Windows 8). The “SQL Express” download package is for customers who have an existing database that is still in use (compatible with Windows XP, Windows Vista, and Windows 7). Follow the “README” file found on the download page.

**Note:** A physical copy may be requested from your Authorized RAD Distributor or New World Technologies Inc.

Download the desired DataLogger option and a Driver package. After the download is complete, select “setup.exe” in the E-RAD Touch Installer folder and follow the installation instructions. Select the executable installer file in the driver folder and follow the installation instructions.

The E-RAD Touch DataLogger Software is compatible with Windows XP, Windows Vista, Windows 7, and Windows 8 operating systems.

The PC must have a free USB port to be used with the USB cable provided.

## 8.2 Connecting E-RAD and PC

**To connect the E-RAD BLU Tool System to a PC:**

1. Connect the USB Cable from the available USB Port to the Communication Port on the E-RAD BLU Controller. Turn on the E-RAD BLU.
2. On the E-RAD BLU Touch Display:
  - a) Select “**Menu**” from the Main Screen.
  - b) Select “**PC Transfer**” from the Main Menu (Figure 8.2-1).
  - c) The PC Transfer Screen will be displayed (Figure 8.2-2).

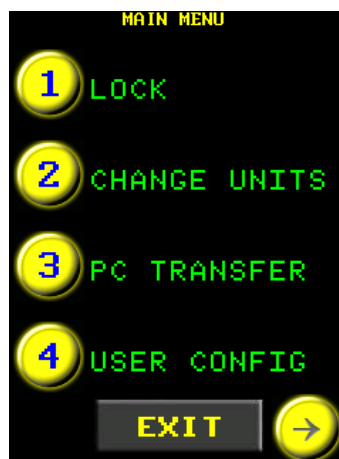


Figure 8.2-1: Main Menu



Figure 8.2-2: PC Transfer Screen

3. Open the E-RAD Touch DataLogger Software (Figure 8.2-3).

**Note:** Ensure that the E-RAD BLU is in PC Transfer Mode (a prompt message will appear as in Figure 8.2-4) and press "OK".

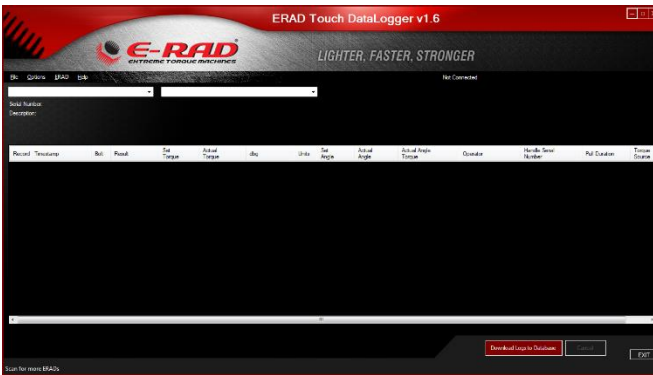


Figure 8.2-3: DataLogger Main Screen

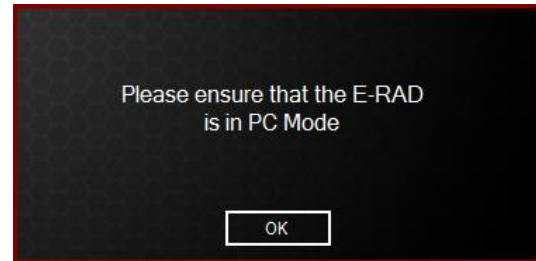


Figure 8.2-4: PC Mode Prompt Window

4. Select the "ERAD" drop-down menu.
5. Select "Scan for more ERADs" from the ERAD menu (Figure 8.2-5) or;
6. To select the E-RAD manually:
  - a) Choose "Select ERAD Manually" from the ERAD Menu.
  - b) Select "Com Port" from the menu (Figure 8.2-6).

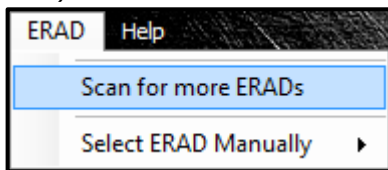


Figure 8.2-5: Scan for More E-RADs

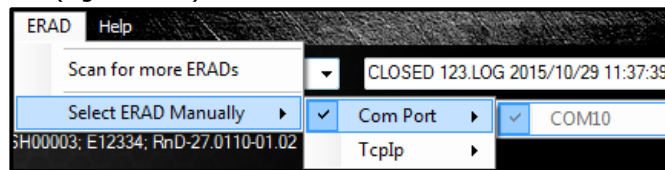


Figure 8.2-6: Com Port Selection from "ERAD" Menu

- c) Select the correct Com Port for the connected tool.

### 8.3 Setting the Clock

The E-RAD Touch DataLogger Software can be used to set the current time and date on the E-RAD BLU.

#### To set the time and date:

1. Ensure the E-RAD BLU Controller is connected and in PC Transfer mode (see Section 8.2 – Connecting E-RAD and PC)
2. Select the "Options" drop down menu.
3. Select "Set RTC" from the Options drop down menu (Figure 8.3-1).
4. The time and date on the E-RAD BLU will be updated to match the time and date on the PC.

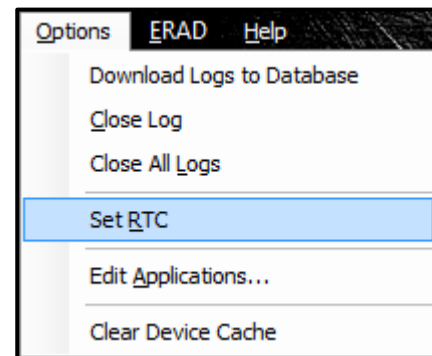


Figure 8.3-1: Set RTC from Options Menu

## 8.4 Downloading all DataLogs

The DataLogs stored on the E-RAD BLU Controller can be downloaded to the DataLogger Software.

### To download all the DataLogs onto the PC:

1. Ensure the E-RAD BLU Controller is connected and is in PC Transfer mode.
2. Press the **"Download Logs to Database"** button on the Main Screen (Figure 8.4-1).



Figure 8.4-1: Download Logs Button

3. The DataLogger Software will download all the DataLogs from the E-RAD BLU Controller. Once the DataLogs have been downloaded to the DataLogger Software, you will be prompted to add descriptions of each DataLog file. The name of the DataLog is displayed above the text box (Figure 8.4-2).

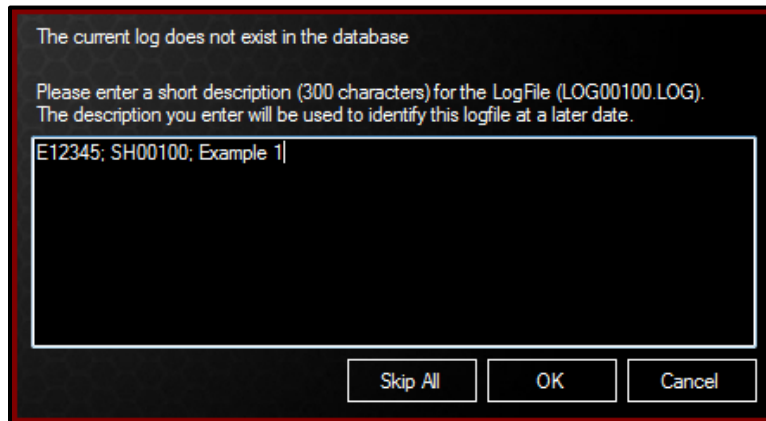


Figure 8.4-2: Data Log Descriptions

## 8.5 Deleting DataLogs from the E-RAD BLU

Once DataLogs are stored in the database, they may be deleted from the Controller. The DataLog will be saved on the PC and the title will be modified to indicate the date it was closed.

### To clear a DataLog:

1. Ensure the E-RAD BLU Controller is connected and is in PC Transfer mode.
2. Select the current tool and the DataLog to be closed (Figure 8.5-1).

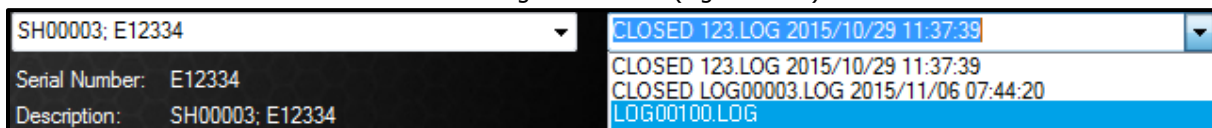


Figure 8.5-1: Select a DataLog

3. Select the **"Options"** drop down menu.
4. Select **"Close Log"** from the Options menu (Figure 8.5-2).
5. Confirm the dialogs.
6. The selected DataLog will be closed in the DataLogger Software and deleted from the E-RAD BLU.

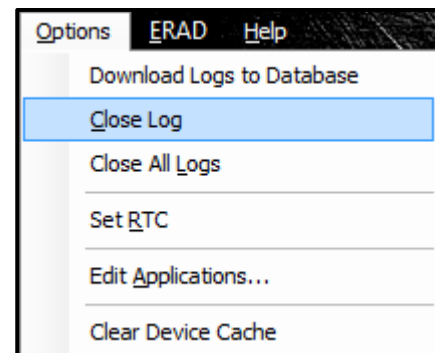


Figure 8.5-2: Close Log Option

## 8.6 Exporting Data

DataLogs may be exported to a file or another program such as Notepad, WordPad, Microsoft Word, or Microsoft Excel. There are two methods to export the DataLog:

### To export the entire DataLog into various file formats:

1. Select the tool and the desired DataLog (Figure 8.6-1).



Figure 8.6-1: E-RAD Tool List

2. Select "Export DataLog" from the File Menu (Figure 8.6-2).
3. The E-RAD Touch DataLogger Software will generate a table of data from the DataLog (example shown in Figure 8.6-3).

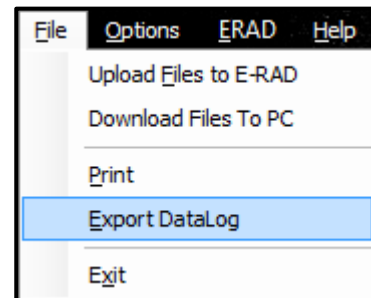


Figure 8.6-2: Export DataLog Option

ID	Time Stamp	Units	Result	Set Torque	Actual Torque	dbg	Set Angle	Actual Angle	Actual Angle Torque	Operator	Handle Serial Number	Pull Duration	Torque Source
1	July-07-15 1:17:04 PM	LBFT	INVALID	500	50	54	0	69	0		11058	.9	
2	July-07-15 1:19:07 PM	LBFT	FAILED	500	597	112	0	278	0		11058	1.9	S
3	July-07-15 1:19:18 PM	LBFT	REVERSED	500	496	0	0	234	0		11058	5.4	M
4	July-07-15 1:19:26 PM	LBFT	PASSED	500	551	78	0	251	0		11058	1.3	S
5	July-07-15 1:19:59 PM	LBFT	REVERSED	500	632	0	0	143	0		11058	3.8	M

Figure 8.6-3: Generated DataLog File

4. There are several options for printing, viewing, and exporting the DataLog. Click the Save icon to export the DataLog as a PDF document, CSV comma delimited format, Excel spreadsheet, Rich Text document, TIFF image stack, or MHTML web archive (Figure 8.6-4).

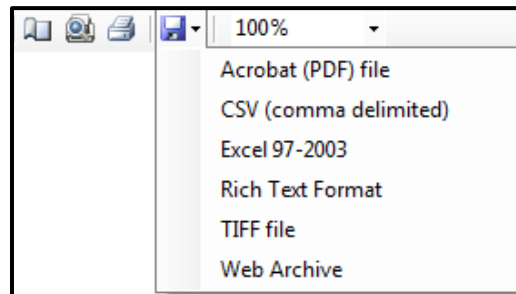


Figure 8.6-4: Print and Export Options

### To select and copy data from a DataLog:

1. Select the tool and the desired DataLog (Figure 8.6-5).



Figure 8.6-5: E-RAD Tool and Logs Selection

2. Click and drag the cursor over the data to select it (Figure 8.6-6).

Record	Timestamp	Result	Set Torque	Actual Torque	dbg	Units	Set Angle	Actual Angle	Actual Angle Torque	Operator
1	28/01/2000 8:29:53 PM	PASSED	400	398	0	LBFT	0	215	0	
2	28/01/2000 8:29:58 PM	REVERSED	400	352	0	LBFT	0	136	0	
3	28/01/2000 8:30:02 PM	PASSED	400	399	0	LBFT	0	153	0	
4	28/01/2000 8:30:06 PM	REVERSED	400	331	0	LBFT	0	157	0	

Figure 8.6-6: Select Data from DataLog

3. Press "Control" + "C" on your keyboard to copy the data.
4. Open the destination program. Microsoft Excel works well for manipulating data in a table format.
5. Press "Control" + "V" to paste the data into the program.

## 8.7 Edit Applications

This function allows you to create and edit Application Presets and transfer them to and from the E-RAD BLU Controller. Refer to Section 4.1 – Select a Preset for more information on Application Presets.

### To view and edit Applications:

1. Ensure the E-RAD BLU is connected and in PC Transfer mode.
2. Select the "Options" drop down menu.
3. Select "Edit Applications..." from the Options menu (Figure 8.7-1).

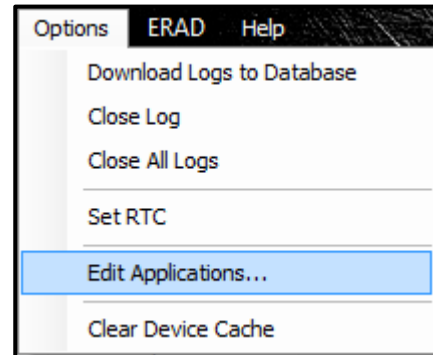


Figure 8.7-1: Options Menu, Edit Applications

4. The Application Presets window will be displayed (Figure 8.7-2).

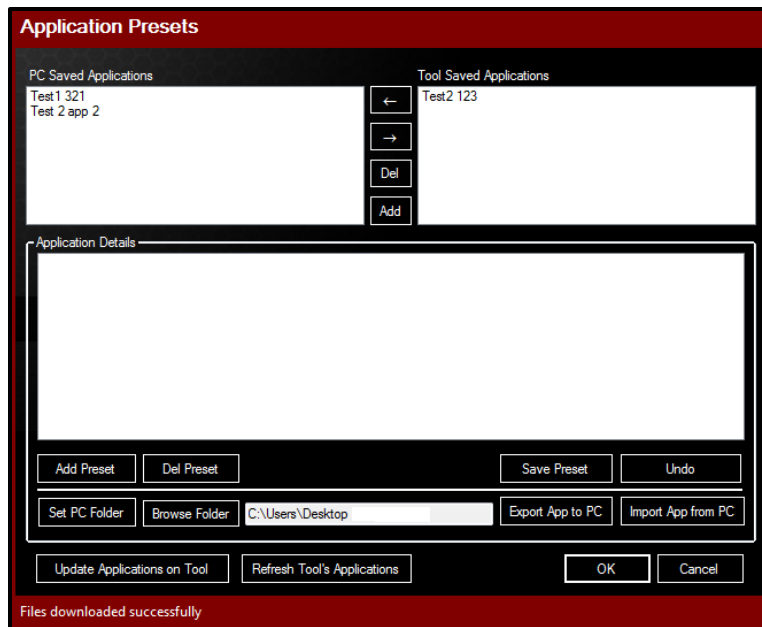


Figure 8.7-2: Application Presets Window

**To create a new Application:**

1. Press the **"Add"** button (Figure 8.7-3).
2. A new application, "Enter Description," will appear under PC Saved Applications (Figure 8.7-4).

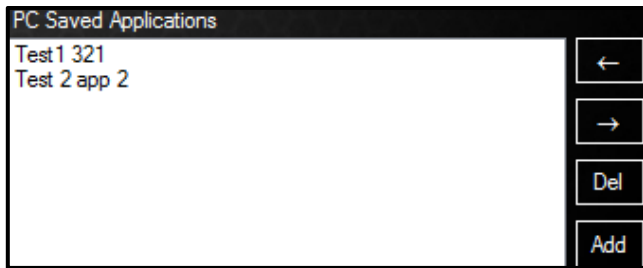


Figure 8.7-3: PC Saved Applications

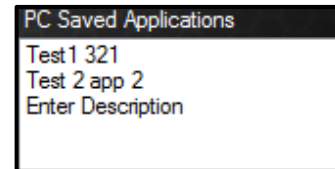


Figure 8.7-4: New PC Application

3. Click on **"Enter Description"** to open the application.
4. The Application will open in Application Details (Figure 8.7-5).

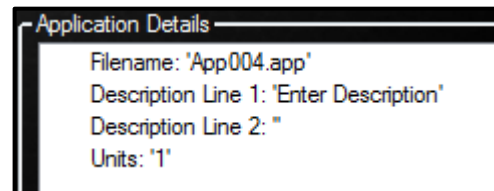


Figure 8.7-5: Application Details

5. Click on "Description Line 1:" to select it and again to edit the description.
6. Set the "Units:" field to "1" for Foot-Pounds or "2" for Newton-Metre units.
7. Press the **"Add Preset"** button (Figure 8.7-6).
8. A Preset will appear in Application Details.
9. Press the **"+"** button beside the Preset to expand it (Figure 8.7-7).
10. Set a Torque and Angle and enter a description (Figure 8.7-8).



Figure 8.7-6: Add Preset

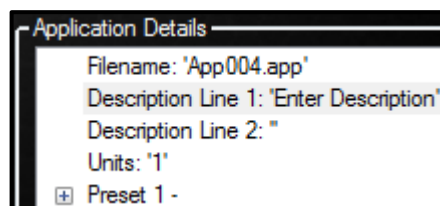


Figure 8.7-7: Application Details

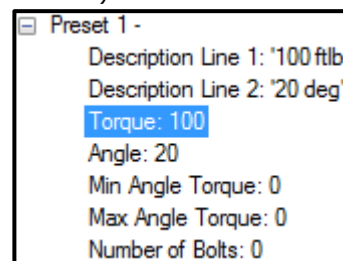


Figure 8.7-8: Edit Preset

11. Repeat steps 6-8 to add multiple Presets.
12. Press the **"Save Preset"** button (Figure 8.7-9).



Figure 8.7-9: "Save Preset" Button

13. Ensure that the Application is highlighted in PC Saved Applications.
14. Press the **"→"** button to copy the Application to the E-RAD.
15. The Application will appear in Tool Saved Applications (Figure 8.7-10).

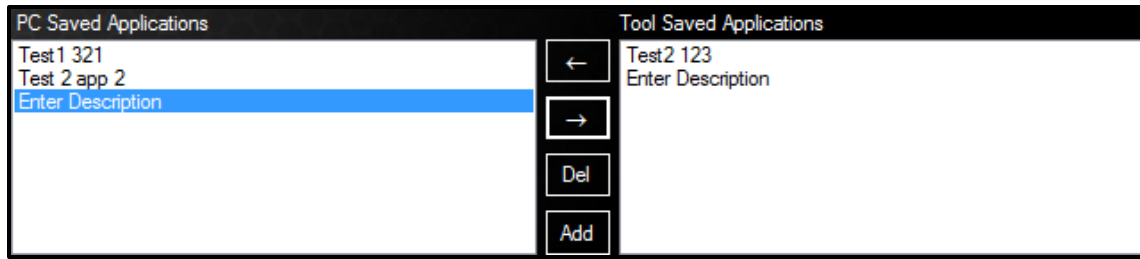


Figure 8.7-10: Tool Saved Applications

16. Press the **“Update Applications on Tool”** button to load the new Application onto the E-RAD (Figure 8.7-11).



Figure 8.7-11: “Update Applications on Tool” Button

**To edit an existing Application:**

**Note:** If the Tool Saved Applications do not load, ensure that the E-RAD is connected and press the **“Refresh Tool’s Applications”** button (Figure 8.7-12).

1. The existing applications will appear in the list of Tool Saved Applications (Figure 8.7-13).



Figure 8.7-12: “Refresh Tool’s Applications” Button

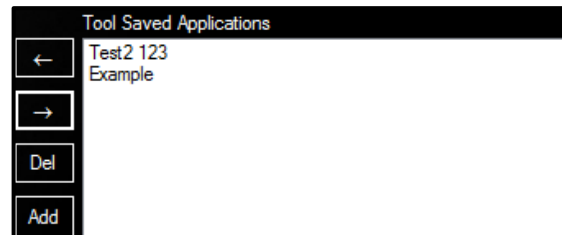


Figure 8.7-13: Tool Saved Applications

1. Select the Application and edit the Presets (Figure 8.7-14).
2. Press the **“Save”** button.

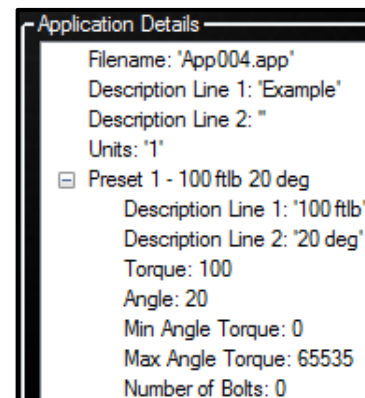


Figure 8.7-14: Edit Preset

3. Press the **“Update Applications on Tool”** button to load the changes onto the E-RAD (Figure 8.7-15).

 


Figure 8.7-15: “Update Applications on Tool” Button

An Application Preset that is in the “PC Saved Applications” section may be exported to a chosen folder.

**To Export an App to the PC:**

1. Select the preset to be exported under the PC Saved Applications section.
2. Set the destination folder (Figure 8.7-16).



Figure 8.7-16: “Set PC Folder” and “Export App to PC” Buttons



3. Press the **"Export App to PC"** button (Figure 8.7-16).

An Application Preset that is saved on the PC can be imported into the DataLogger PC Saved Applications.

**To Import an App from the PC:**

1. Set the folder that the application file is located (Figure 8.7-16).
2. Press the **"Import App from PC"** button.
3. Select the ".app" file to be imported.
4. The application file will be placed in PC Saved Applications as the last file in the list.

## 8.8 Manage Operator Passwords

The Operator Password function is outlined in Section 5.4 – Operator Password. Custom operator names and passwords may be loaded into the E-RAD BLU Controller to be used when the Operator Password function is enabled. DataLog files include the operator's name when selected.

**Note:** In this section, an underscore "\_" represents a space. When creating this file, use spaces in place of underscores. Correct spacing is important for the E-RAD BLU to be able to read the file.

**To create the Operator Password File:**

1. Open a plain text editor on the PC.
2. Enter the first line "PASSWORD\_ \_ \_ \_OPERATOR'S\_NAME" (exclude the quotation marks and replace the underscores with spaces). See Figure 8.8-1 for an example.

**Note:** All the letters must be uppercase.

3. Enter the first password and operator's name on the second line. The password must have the correct number of spaces between it and the operator's name (if used).

Example: "1234\_ \_ \_ \_ \_JOHN".

**Note:** The password may be up to eight characters. The operator's name may be up to 15 characters or be left blank.

4. Enter more passwords and operator's names if needed. Each password must be unique. Press enter to start the next line.

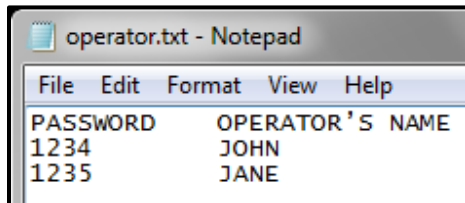


Figure 8.8-1: Example Operator Password File

5. Save this file with the name **"operator.txt"** in an accessible location.
6. Open the E-RAD Touch DataLogger Software and ensure that the E-RAD BLU is in PC Transfer Mode.
7. Select the **"File"** drop down menu.
8. Select **"Upload Files to E-RAD"** from the File drop down menu (Figure 8.8-2).

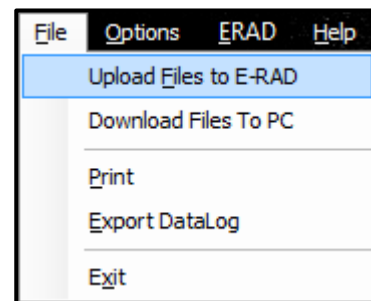


Figure 8.8-2: Upload Files to E-RAD

9. A File Explorer Window will appear. Select the Operator Password file created previously.
10. After the upload is completed, a message will be displayed indicating if the upload was successful or not.

## 9.0 TROUBLESHOOTING



### **DANGER!**

Electrical Shock can cause serious or fatal injury. Do not remove the E-RAD BLU Controller Top Plate or attempt any repairs without approval and training. Do not touch any exposed power devices, electrical connections, or cables. Disassembling or attempting to repair the E-RAD BLU Handle or Controller will void warranty.

## 9.1 Errors and Solutions

In case of an error or problem, the E-RAD BLU Touch Display will display an error message and disable tool operation. Table 9.1-1 lists error messages, problems that may occur, and possible solutions to the problem.


**Note:** If the problem or error persists after following solution instructions, contact New World Technologies Inc. Technical Support (refer to Section 10.0 – Contact Us).

<b>Error</b>	<b>Symptoms/Reasons</b>	<b>Possible Solution(s)</b>
Screen is blank/ Tool not turning on	The Touch Display remains off; cooling fans don't run; LEDs don't turn on.	<ol style="list-style-type: none"> <li>1. Ensure E-RAD BLU Power Switch is on.</li> <li>2. Check that the AC Power Cable is connected to the Controller and AC Mains Power Supply of the correct specifications.</li> <li>3. If a blown fuse is suspected, Contact Us.</li> </ol>
Stuck in Initialization	The E-RAD BLU Tool System turns on; the Touch Display is on but is stuck in "Initialization".	<p>Power-Cycle the E-RAD BLU Tool System:</p> <ol style="list-style-type: none"> <li>1. Switch the Power Switch to the Off Position.</li> <li>2. Wait two minutes.</li> <li>3. Switch the Power Switch to the On Position and re-try.</li> </ol>
FB Not Ready/Analog Sensor	The E-RAD BLU Controller is not receiving feedback from the Tool Handle.	<p>Check the Tool Handle Cable:</p> <ol style="list-style-type: none"> <li>1. Switch the Power Switch to the Off Position and wait two minutes before proceeding.</li> <li>2. Remove the Tool Handle Cable from the Tool Handle Connector on the side of the E-RAD BLU Controller.</li> <li>3. Visually check the condition of the Tool Handle Cable and the pins in the Connectors. Ensure that there are no cuts or breaks in the cable insulating jacket and the pins are present and in good condition.</li> <li>4. Connect the Tool Handle Cable to the Connector.</li> <li>5. Ensure that the connections are locked in place.</li> <li>6. Switch the Power Switch to the On Position and try again.</li> </ol>
Feedback Loss	The E-RAD BLU Controller has lost the feedback signal from the Tool Handle.	Check the Tool Handle Cable (see above).
Overspeed	The motor is moving too fast during a cycle. Usually caused by a loss of feedback from the motor to the servo drive.	Check the Tool Handle Cable (see above).
Position Error	The motor is not in the expected position. Usually caused by a loss of feedback from the motor to the servo drive.	Check the Tool Handle Cable (see above).
Position Limit Exceeded	The motor position exceeded the expected motor movement during an Angle Cycle.	Check the Tool Handle Cable (see above).
Motor Stuck	The servo driver is unable to rotate the motor. Usually caused by a loss of feedback or power from the motor to the servo drive.	Check the Tool Handle Cable (see above).

Peak Current Exceeded	The E-RAD BLU Controller or Tool Handle current draw has exceeded the Maximum Limit.	<ol style="list-style-type: none"> <li>1. Check the Tool Handle Cable.</li> <li>2. Check that the AC Power Cable is connected to the Controller and AC Mains Power Supply of the correct specifications.</li> <li>3. Power-cycle the Controller. Wait 2 minutes before powering-on.</li> </ol>
Inhibited	The motor is disabled. This is usually caused by a loss of feedback or power from the motor to the servo drive.	<ol style="list-style-type: none"> <li>1. Reset the error message using the Forward/Reverse Switch: <ol style="list-style-type: none"> <li>a. Switch the Forward/Reverse Switch to the Reverse Position.</li> <li>b. Switch the Forward/Reverse Switch to the Forward Position.</li> <li>c. Re-try.</li> </ol> </li> <li>2. Power-cycle the Controller. Wait 2 minutes before powering-on.</li> </ol>
Motor Cannot Start	The servo driver is unable to rotate the motor. Usually caused by a loss of feedback or power to the motor or the servo drive.	Power-cycle the Controller. Wait 2 minutes before powering-on.
DB Inconsistent	An intermittent fault in the AC/DC conversion has resulted in unexpected changes in signal amplification.	<ol style="list-style-type: none"> <li>1. Check the Tool Handle Cable.</li> <li>2. Check that the AC Power Cable is connected to the Controller and AC Mains Power Supply of the correct specifications.</li> <li>3. Power-cycle the Controller. Wait 2 minutes before powering-on.</li> </ol>
Under Voltage	The DC power provided to the motor is too low.	<ol style="list-style-type: none"> <li>1. Check that the AC Power Cable is connected to the Controller and AC Mains Power Supply of the correct specifications.</li> <li>2. Power-cycle the Controller. Wait 2 minutes before powering-on.</li> </ol>
Over Voltage	The DC power provided to the motor exceeds the limitations.	<ol style="list-style-type: none"> <li>1. Check that the AC Power Cable is connected to the Controller and AC Mains Power Supply of the correct specifications.</li> <li>2. Power-cycle the Controller. Wait 2 minutes before powering-on.</li> </ol>
Short Circuit		Immediately power off the E-RAD BLU and remove from service. Contact New World Technologies Inc. Technical Support (Section 10.0 – Contact Us).
Over Temp	The E-RAD BLU Controller’s Internal Temperature has exceeded the limit.	<p>To cool the E-RAD BLU Tool System:</p> <ol style="list-style-type: none"> <li>1. Ensure that the Controller Cooling Fans are functional and the filter covers are not blocked, or;</li> <li>2. Switch the Power Switch to the Off Position until the temperature of the system is within specifications.</li> </ol>
“Internal Error” or “Program Error”	<p>An “Internal Error” may display any of the following messages:</p> <ul style="list-style-type: none"> <li>- Controller Comms – loss of communication between Control Modules.</li> <li>- Comms Lost – loss of communication between control modules.</li> <li>- NVRam Lost – corrupt memory resulting in loss of data.</li> <li>- Unknown Err.</li> <li>- Stack Overflow – program crashed.</li> <li>- CPU Fatal Exception – Processor failure.</li> </ul>	Power-cycle the Controller. Wait 2 minutes before powering-on.
“Case and Screen Have Different Versions”	The programs on the controller and touch screen do not match.	Solution: Contact your RAD Distributor for assistance.
“Tool Info Lost”	The tool’s information (units, voltage, serial numbers, etc.) has been lost.	Solution: Contact your RAD Distributor for assistance.
“Program Not Validated”/“Validation Failed”	The program has not been validated or the validation process has failed.	Solution: Contact your RAD Distributor for assistance.
“Sensor Comms Lost”/“Handle Comms Lost”	Communications with the sensor or the handle have been lost.	<ol style="list-style-type: none"> <li>1. Check the Tool Handle Cable.</li> <li>2. Refer to Section 4.7.1 – View Tool Information. Check if the Handle Information and the Sensor Information are in the menus. If not, contact your RAD Distributor for assistance.</li> </ol>

Table 9.1-1: List of Errors, Symptoms, and Possible Solutions

## 9.2 Connecting to a Smart Socket: Troubleshooting

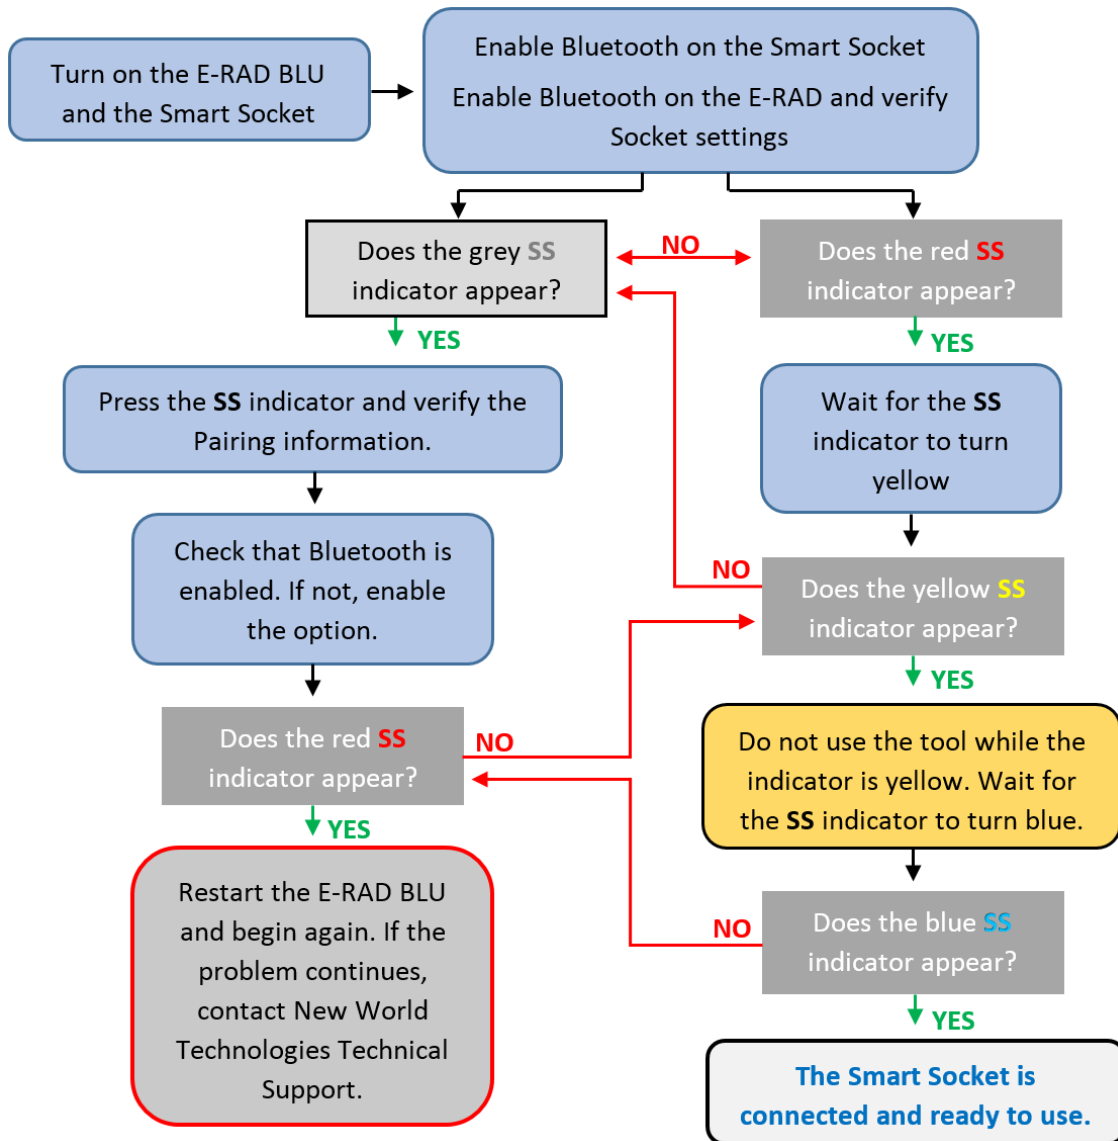

## 10.0 CONTACT US

### **New World Technologies Inc.**

30580 Progressive Way  
Abbotsford, BC  
V2T 6Z2  
Canada



**Toll Free:** 1-800-983-0044

**Fax:** 604-852-0269

**Web:** [www.radtorque.com](http://www.radtorque.com)

**Email:** [info@radtorque.com](mailto:info@radtorque.com)

### **Technical Support:**

**Phone:** 1-800-983-0044 (EXT. 227)

**Email:** [eradsupport@radtorque.com](mailto:eradsupport@radtorque.com)

